CITIZEN

User's Manual

Model : PPU series

Line Thermal Printer/Presenter Unit

Rev 1.00 Newly issued on 29.Oct.1998

Japan CBM Corporation Information Systems Div.

IMPORTANT SAFETY INSTRUCTIONS

•Read all of these instructions and save them for future reference.

- •Follow all warnings and instructions marked on the product.
- •Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- •Do not use this product near water.
- •Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
- •Slots and openings on the back or bottom of the case are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, do not block or cover these openings. The openings should never be blocked by placing the product on a bed, sofa, rug of other similar surface. This product should never be placed near or over a radiator or heater. This product should not be placed in an built-in installation unless proper ventilation is provided.
- •This product should be operated from the type of power source indicated on the marking label. If you re not sure of the type of power available, consult your dealer or local power company.
- •Do not allow anything to rest on the power cord. Do not place this product where the cord will be walked on.
- •If an extension cord is used with this product, make sure that the total of the ampere ratings of the products plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes.
- •Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- •Except as explained elsewhere in this manual, do not attempt to service this product by yourself. Opening and removing the covers that are marked "Do Not Remove" may expose you to dangerous voltage points or other risks. Refer all servicing on those compartments to service personnel.
- •Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered be the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance, indicating a need for service.
- •Please keep the poly bag which this equipment is packed in away from children or throw it away to prevent children from putting it on. Putting it on may cause suffocation.

WICHTIGE SICHERHEITSANWEISUNGEN

- •Lesen Sie die nachfolgenden Anweisungen sorgfältig durch und bewahren Sie sie auf.
- •Befolgen Sie alle auf der Einheit vermerkten Hinweise und Anweisungen. Vor dem Reinigen grundsätzlich Stecker aus der Steckdose ziehen. Keine Flüssigkeiten oder Aerosolreiniger benutzen. Nut mit einem feuchten Tuch abwischen.
- •Die Einheit darf nicht in der Nähe von Wasser aufgestellt werden.
- •Einheit nicht auf einem unstabilen Wagen, Stand oder Tisch aufstellen. Der Einheit könnte herunterfallen und dabel beschädigt werden.
- •Schlitze und Öffnungen im Gehäuse, in der Rückwand und im Boden dienen der Belüftung. Sie dürfen keinesfalls zugedeckt oder blockiert werden, da sich die Einheit sonst überhitzt. Einheit nicht auf ein Bett, Sofa, Teppich oder dergleichen stellen. Einheit nicht in der Nähe eines Heizkörpers aufstellen. Einheit darf nicht eingebaut werden, falls nicht für ausreichende Belüftung gesorgt ist.
- •Einheit nur mit der auf dem Typschild angegebenen Spannung betreiben. Wenn Sie sich nicht sicher sind, fragen Sie ihren Händler oder ihr zuständiges Elektrizitätswerk.
- •Nichts auf das Stromanschlußkabel stellen. Kabel muß so verlegt werden, daß man nicht darauftreten kann.
- •Ein etwaiges Verlängerungskabel muß der Stromstärke aller daran angeschlossenen Geräte entsprechen.
- •Keine Gegenstände in die Gehäuseschlitze schieben.
- •Einheit darf nur da gewartet werden, wo im Handbuch angegeben, Öffnen und. Abnehmen von Abdeckungen, die mit "Do not remove" gekennzeichenet sind, könnte gefährliche spannungführende Stellen oder sonstige Gefahrenpunkte freilegen. Die Wartung solcher Stellen darf grundsätzlich nur von besonders ausgebildetem Fachpersonal vorgenommen werden.
 - A. Wenn das Stromanschlußkabel oder der Stecker beschädigt oder durch-gescheuert ist.
 - B. Wenn Flüssigkeit auf der Einheit verschüttet wurde.
 - C. Wenn die Einheit im Regen gestanden hat oder Wasser darauf verschüttet wurde.
 - D. Wenn die Einheit trotz genauer Befolgung der Betriebsvorschriften nicht richtig arbeitet. Nur die in der Bedienungsanleitung angegebenen Einstellungen vornehmen. Ein Verstellen anderer Bedienungselemente könnte die Einheit beschädigen und macht umständliche Arbeiten eines qualifizierten Technikers erforderlich, um die Einheit Wieder auf den normalen Betrieb einzustellen.
 - E. Wenn die Einheit heruntergefallen ist oder das Gehäuse beschädigt wurde.
 - F. Wenn die Einheit in seiner Leistung nachläßt.
- Bitte halten Sie den Kunststoffbeutel, in den die Ware verpackt ist, von Kindern entfernt, oder werfen Sie ihn weg, damit er nicht in die Hande von Kindern gerät. Das Überstülpen des Beutels kann zum Ersticken führen.

Lärmemission kleiner 70dBA

<CAUTIONS>

- 1. Prior to using the equipment, be sure to read this User's Manual thoroughly. Please keep it handy for reference whenever it may be needed.
- 2. The information contained herein may be changed without prior notice.
- 3. Reproduction of part or all of this User's Manual without permission is strictly prohibited.
- 4. Never service, disassemble, or repair parts that are not mentioned in this User's Manual.
- 5. Note that we will not be responsible for damages attributable to a user's incorrect operation/ handling or an improper operating environment.
- 6. Operate the equipment only as described in this User's Manual; otherwise accidents or problems may result.
- 7. Data are basically temporary; they cannot be stored or saved permanently or for a long time. Please note that we will not be responsible for damages or losses of profit resulting from losses of the data attributable to accidents, repairs, tests, and so on.
- 8. If you have any questions or notice any clerical errors or omissions regarding the information in this manual, please contact our office.
- 9. Please note that, notwithstanding Item 8 above, we will not be responsible for any effects resulting from operation of the equipment.

SAFETY PRECAUTIONS ----- BE SURE TO OBSERVE

In order to prevent hazards to an operator or other persons and damage to property, be sure to observe the following precautions.

• The following describes the degrees of hazard and damages that can occur if the given instructions are neglected or the equipment is incorrectly operated.

🖄 WARNING	Negligence of this precaution may result in death or serious injury.
	Negligence of this precaution may result in injury or damage to property.

- This is an illustration mark used to alert your attention.
- (i) This is an illustration mark used to indicate such information as an instruction or the like.

WARNING • Never handle the equipment in the following manners, as it may break, become out of order, or overheat causing smoke and resulting in fire or electric shock. If the equipment is used in an abnormal condition, such as when broken, then problems, smoke emission, abnormal odor/noise, and fire can result. If an abnormal condition exists, be sure to disconnect the power plug from a plug socket, and contact our dealer. Never repair the equipment on your own - it is very dangerous. • Do not allow the equipment to receive a strong impact or shock, such as kicking, stomping, hitting, dropping, and the like. • Install the equipment in a well-ventilated place. Do not use it in such a manner that its ventilation port will be blocked. • Do not install the equipment in a place like a laboratory where chemical reactions are expected, or in a place where salt or gases are contained in the air. • Do not connect/disconnect a power cord or a data cable, while holding the cable. Do not pull, install, use, or carry the equipment in such a manner that force will be applied to the cables. • Do not drop or insert any foreign substances, such as clips or pins, into the equipment. • Do not spill any liquid or spray any chemical-containing liquid over the equipment. If any

- Do not spill any liquid or spray any chemical-containing liquid over the equipment. If any liquid is spilled on it, turn off the power, disconnect the power cable and power cord from the plug socket, and so on, and contact our dealer.
- Never disassemble or remodel the equipment. Negligence of this may cause fire or electric shock.
- Use the equipment only with the specified commercial power supply and AC adapter. Negligence of this may result in fire, electric shock, or problems.
- If you drop or break the AC adapter, or if water or the like gets inside it, unplug it immediately from the socket and contact your dealer.
- Do not damage, break, process, bend/pull by force, twist, or head an AC adapter cord. Also, do not put a heavy substance on it or heat it. The AC adapter cord could be broken, resulting in fire, electric shock, or trouble. If the AC adapter cord is damaged, contact our dealer.
- Do not connect/disconnect the AC adapter with wet hands.
- Do not overload a single electrical outlet, using a table tap or a current tap socket.
- An equipment packing bag must be discarded or kept away from children. A child can suffocate if the bag is placed over the head.

⚠ PRECAUTIONS FOR INSTALLATION

- Do not use or store the equipment in a place exposed to fire, moisture, or direct sunshine, or in a place near a heater or thermal device where the prescribed operating temperature and humidity are not met, or in a place exposed to much oil, iron powder, or dust. The equipment may become out of order, emit smoke, or catch fire.
- Do not install or use the equipment in a place like a laboratory where chemical reactions are expected, or in a place where salt or gases are contained in the air. There is a danger of fire or electric shock.
- Install the unit on a flat, stable desk or table that is free from vibration, in a well-ventilated place.
- Do not install the unit at a location where its operation could be hindered.
- Do not place anything on the unit or leave small objects, like a clip or pin, around it. A foreign object could cause trouble if it gets inside.
- Do not use any sharp-pointed object, such as a pen, for example, to touch the operation panel of the unit. It could cause trouble.
- Do not use the equipment near a radio or TV receiver. Do not share the power from a plug socket a radio or TV receiver is connected to. It may cause a reception problem.
- Use the equipment only at the specified power supply, voltage and frequency. Otherwise, it may emit smoke and catch fire or cause other problems.
- Connect only the specified power source. Use of an unspecified power source could cause trouble or smoke/fire.
- Confirm that a plug socket used for connection has sufficient capacity.
- Avoid connecting a power cable to a plug socket shared by other devices or extending the wiring too far. It may result in the cable catching fire or a power outage. Also, do not step on or apply an excessive force (Pull, load) to the cable, and do not use the unit with such a force applied to it.
- Never connect a grounding cable (Frame ground) to a gas pipe. There is a danger of explosion. When connecting or disconnecting the grounding cable, be sure to disconnect the power cable and the power plug from the plug socket.
- When connecting/disconnecting the cables, be sure to turn off the power first, including the connected side, and then connect/disconnect them, holding a plug and a connector. Pulling the cable itself could cause it to snap or become damaged.
- Connect a power cable or a connector cable securely. If a reverse-polarity connection is made, internal elements may be broken or a mating device may be adversely affected.
- Use a shielding wire or twisted pair wire for a signal line, in order to minimize noise effect. Do not route the cable too long or connect it to a noisy device. Connection to a noisy device could cause erroneous printing due to corrupt data, and so on.
- Use the equipment in an environment where there is a plug socket near the main body and you can easily disconnect the power plug from it, to shut off the power.
- When the equipment will not be used for a long period of time, unplug it and remove the paper roll from it.
- When transporting the equipment, remove the paper roll from the paper holder.

A PRECAUTIONS FOR HANDLING

Do not handle the equipment in the following manners, because problems may result.

- Do not use any other power source besides the accessory AC adapter. Also, do not use the AC adapter for other purposes.
- Do not print without paper.
- Do not drop or put any foreign object, such as a clip, pin, or the like, inside the unit.
- Do not spill any liquid or spray any chemical-containing liquid over the equipment.
- Never use a pointed object, such as a pen, to operate the operation panel.
- Do not use Scotch tape to fasten paper together for continuous use. It could damage the printing head.
- Never pull the set paper forcibly. When opening/closing the unit cover, take care that the paper will not be caught. It could cause the paper to jam.
- Be sure to use the specified paper. Use of other paper could deteriorate the print quality or cause a problem with the printing head.

To Prevent Injury and Spreading of Damage

- Never touch the printing head, motor, or paper cutting blade. Your finger may be cut.
- During power-on or immediately after printing, do not touch electrical parts or moving parts, such as the mechanism, motor, internal gear, etc. They may be very hot and can burn your hand/finger.
- Be careful to avoid bodily injure or damaging other objects with an edge of sheet metal.
- Should any error occur while operating the equipment, stop it immediately and disconnect the power plug from the plug socket.
- Only a qualified serviceman is allowed to disassemble or repair the unit.
- Should a problem occur, leave solving it to our serviceman. Do not disassemble the equipment on your own.
- When opening/closing the unit cover, and so on, be careful not to catch your hand or finger on the equipment.
- After using the equipment, turn off the power switch and unplug the AC adapter from a plug socket.

$(\underline{i}) \text{DAILY MAINTENANCE}$

- At the time of maintenance, be sure to turn off the power switch of the unit and unplug it from the socket.
- Use a dry soft cloth to wipe off stains and dust from the surfaces of the main body case. For severe soiling, dip the cloth in water and wring it, for wiping off the soil. Never use organic solvents, such as alcohol, thinner, trichlene, benzene, ketone, or chemical dusters.
- If the equipment is contaminated with paper powder, use a soft brush to clean it. Be careful not to damage the printing head.

CAUTION: The printing head and motor are very hot. Be careful not to touch them immediately after printing. Do not touch the heating surface of the head with a bare hand or metal.

CONTENTS

1.	Ol	UTLINE	13
	1.1	Features	13
	1.2	Unpacking	13
2.	BA	ASIC SPECIFICATIONS	14
	2.1	Model Classifications	14
	2	2.1.1 PPU series (Printer/Presenter unit)	14
	2	2.1.2 Options	15
	2	2.1.3 Miscellaneous	16
	2.2	Basic Specifications	18
	2.3	Paper Specifications	19
	2	2.3.1 Recommended Paper	19
	2	2.3.2 Printing Position	19
	2	2.3.3 Printing Head and Paper Cutter Layout	19
2		LITER ADDEADANCE AND COMPONENT PARTS	21
J.	2 1	DDI I (Drinter/Dresenter Init)	21
	3.1	Optional PHLL (Paper Holding Lipit)	2 I 22
	0.2		25
4.	OF	PERATION	24
	4.1	Connecting the AC Adapter	24
	4	1.1.1 Using the Power Connector	24
	4	1.1.2 Connecting a Power Cable to the Control PCB	25
	4.2	Connecting the Interface Cable	26
	4.3	Inserting the Paper	29
	4.4	How to Remove Remaining Paper Roll	30
	4.5	Eliminating the Paper Jam	31
	4	4.5.1 Eliminating a Jam in the Printer Mechanism	31
	4	1.5.2 Eliminating a Jam in the Presenter	32
	4.6	Releasing a Locked Cutter	33
	4.7	FEED Switch Function	33
	4.8	Paper End Function	33
	4.9	Connecting the PHU (Paper Holding Unit)	34
	4.10) Paper Near End Function (When Using the PHU)	34
	4.11	Auto-Loading Function	35
	4.12	2 Self-Print Function	35

5. DIP SWITCH SETTING	
5.1 Location of DIP Switch	
5.2 DIP Switch Function	
6. PARALLEL INTERFACE	39
6.1 Specifications	
6.2 Connector's Pin Configuration	
6.3 Input and Output Signals	
6.3.1 Input and Output Signals	
6.3.2 Electrical Characteristics	
6.3.3 Timing Chart	
6.3.4 Data Receiving Control	
6.3.5 Buffering	
7. SERIAL INTERFACE	
7.1 Specifications	
7.2 Connector's Pin Configuration	
7.3 Input and Output Signals	
7.3.1 Input and Output Signals	
7.3.2 Data Configuration	
7.3.3 Error Detection	
7.3.4 Data Receiving Control	
7.3.5 Buffering	
7.3.6 Electrical Characteristics	
8. POWER CONNECTOR	
9. MAINTENANCE AND SERVICE	
10. PRINT CONTROL FUNCTIONS	
10.1 Commands List	
10.2 Command Details	
10.2.1 Description of Items	
10.2.2 Details	
11. CHARACTER CODES TABLE	
11.1 International	
11.2 Japanese	

APPENDIX 1.	BLOCK DIAGRAM	96
APPENDIX 2.	OUTLINE DRAWING FOR PPU	97
APPENDIX 3.	OUTLINE DRAWING FOR PHU	98

1. OUTLINE

Packed with features, this small line thermal printer/presenter has a wide range of uses: a terminal device for various data communication, an instrumentation terminal, an outdoor information terminal or a device that prints various tickets and coupons. Please read this manual thoroughly before you use the printer/presenter to ensure it is implemented correctly.

1.1 Features

- 1. Small, lightweight, and installable in a narrow area
- 2. High speed and low noise, owing to line thermal print
- 3. Long-life printing head and high reliability, owing to the simple mechanism
- 4. Easy paper-loading, owing to the auto-loading function
- 5. Built-in input buffer
- 6. Capable of printing a bar code (Special command)
- 7. You can choose where you attach the power connector, interface connector, etc.
- 8. Large diameter paper roll support

1.2 Unpacking

When unpacking the package, confirm that the following parts are provided:

 Printer/Presenter unit 	1 unit
 User's manual 	1 сору

- 1) Install the unit body on a flat and stable device.
- 2) Do not install the unit near a heater or in a place exposed to the direct sunshine.
- 3) Do not use the unit in a high-temperature, high-humidity, or contaminated environment.
- 4) Do not allow dew condensation to form on the unit. If such condensation should form, do not turn on the power until it has completely gone away
- 5) Use only the specified AC adapter. Do not use it for any other purpose.
- 6) If you do not use the unit for a long period, disconnect the power cable from the socket.
- 7) Keep this manual carefully at hand for ready reference.t put the AC power cord close to a heating device.

2. BASIC SPECIFICATIONS

2.1 Model Classifications

Classification is made according to the following naming system.

2.1.1 PPU series (Printer/Presenter unit)



For PPU-231 R U or E (Serial Interface):

The type of cable fixing screws for the serial interface connector depends on the destinations.

- U: Inch type screws
- E: mm type screws



2.1.2 Options



(1) PHU series (Paper holding unit)



2.1.3 Miscellaneous

The following models are sold as single units.

(1) PRU series (Presenter unit)

<u>PRU-130</u>



(2) PMU series (Printer mechanism unit)

PMU-230



(3) BD2 series (Control PCB with accessories)



For BD2-380A R U or E (Serial Interface):

The type of cable fixing screws for the serial interface connector depends on the destinations.

- U: Inch type screws
- E: mm type screws



A more detailed specification description is listed in the PHU, PRU, PMU, BD2 user's manual, which is a separate booklet.

2.2 Basic Specifications

Item	Description		
Printing system	Line thermal dot printing		
Printing width	72 mm (576 dots/line)		
Dot density	8 dots/mm (Width, Length)		
Printing speed	62.5 mm/sec. (At maximum), 500 dots/sec.		
Printing columns and	48 columns (12 × 24 Font A) 1.25 × 3.00 mm		
character size	64 columns (9 × 24 Font B) 0.88 × 3.00 mm		
Line interval	Initial value: 4.23 mm (1/6 inch)		
	Can be set with a command (1/203 inch at minimum)		
Character types	Alphanumeric, Japanese, international characters		
Bar code type	UPC-A, JAN(EAN) 13-/8-column, ITF, CODE 39, CODE 128, CODABAR		
Paper	Thermal paper roll		
(See Paper Specifications)	Width : 80 mm		
	Outer diameter : (\$203 mm (Max.), (When using PHU)		
	Inner diameter : (425.4 mm (Max.)		
	Thickness : 60~85µm		
Presenter	Length of normal issue		
	$64\sim305$ mm (Can be adapted to issue 457mm lengths)		
	2.5~12 inches (Can be adapted to issue 18 inch lengths)		
Interface	Serial (RS-232C), Parallel (Conforms to CENTRONICS)		
Input buffer	4 KB		
Command	ESC/POS		
Sensors	Paper near end sensor (When using PHU, position adjustable)		
	Paper end sensor (When using PMU)		
	Black mark sensor (Option)		
Supply voltage	24 V DC +/- 7%		
Power consumption	100 W		
Weight	PPU : 1.6 kg (Control PCB included)		
	PHU : 0.9 kg (Paper roll excluded)		
Outer dimensions	PPU : 144.7 (W) × 160 (D) × 172 (H) mm		
	PHU :132.2 (W) × 120 (D) × 125.2 (H) mm		
	*: Protruding parts are not included. For details, see Appendices 2 and 3.		
Operating temperature	5~40°C, 35~85 % RH (No dew condensation)		
and humidity			
Storage temperature and	-20~60°C, 10~90% RH (No dew condensation)		
humidity	· · · · · · · · · · · · · · · · · · ·		
Reliability	ty Printing head life:		
	Pulse resistance : 50 million pulses or more (Print rate 12.5%)		
	Wear resistance : 30 km or more (With recommended thermal paper at		
normal temperature and humidity)			
Auto cutter life:			
300,000 cuts (With recommended thermal paper at normal temperation			
	humidity)		

2.3 Paper Specifications

2.3.1 Recommended Paper

•Туре	: Thermal paper
 Paper width 	: 80 + 0/- 1 mm
 Paper thickness 	: 60~85µm
•Roll diameter	: φ203 mm or less (When using PHU)
 Printing surface 	: Outside of the roll (Surface)
•Recommended paper	: TF50KS-E, E2C (Monochrome) made by NIPPON SEISHI or its equivalent
•Core	: ¢25.4 mm (Inner diameter)

CAUTION:

- 1) Use of non-specified paper may cause irregularity of print density. If this is the case, use the DIP switch to reset print density. (See 5. DIP SWITCH SETTING)
- 2) Do not paste the paper to the core.
- 3) If the paper comes in contact with a chemical or oil, it may discolor or lose a record.
- 4) Do not rub the paper surface strongly with a nail or hard metal. It may discolor.
- 5) Discoloring starts at about 70°C. Watch out for effects of heat, humidity, light, and so on.

2.3.2 Printing Position



2.3.3 Printing Head and Paper Cutter Layout



3. OUTER APPEARANCE AND COMPONENT PARTS

3.1 PPU (Printer/Presenter Unit)



(1) POWER switch

Turns on/off the power for the printer/presenter unit

(The POWER switch can be mounted either side of the unit.).

- (2) FEED switchFeeds the paper to exit the paper.
- (3) Power connector

Connects to the optional AC adapter (31AD).

(The power connector can be mounted at any one of the 6 locations on the unit. See 4.1.1 "Connecting the AC Adapter".)

- (4) PresenterFeeds the paper roll.
- (5) Auto Cutter

Automatically cuts the printed paper by a command. Either partial cut or full cut is selectable.

(6) DIP switches

Initially set the printer/presenter unit at power-on and set the functions.

(7) Interface connector

Connects to a communication interface cable. There are two types, for serial and parallel interfaces.

- (8) Head-up leverUsed when inserting the paper or exiting the paper.
- (9) Knob

Use this to manually feed the paper.

(10) Front door

Open this door to remove remaining paper inside the presenter.

3.2 Optional PHU (Paper Holding Unit)



- (11) PNE (Paper Near End) sensor Detects that the paper is running out.
- (12) PNE sensor position adjust screw

Use this screw to adjust the paper remaining amount until paper near end sensor is activated.

(13) Paper roller

Holds the paper roll.

4. OPERATION

4.1 Connecting the AC Adapter

4.1.1 Using the Power Connector

- 1. Make sure the power switch of the unit is turned off.
- 2. Connect an optional AC adapter cable connector with the power connector of the unit so that it locks in place. (As shown in the figure below, the power connector can be mounted at any one of the 6 locations on the unit.)
- 3. Connect an optional AC power cord to the AC adapter and plug it into an electrical outlet.



4.1.2 Connecting a Power Cable to the Control PCB

If you wish, you do not need to use an optional AC adapter, instead you can directly connect a power cable (not supplied) to the control PCB.

- 1. Turn off the power.
- 2. Plug the power cable into the CN1 power connector of the control PCB. See the table below for detail on the CN1 connector pin configurations.



[Connector's pin configuration for power supply (CN1)]

No.	Signal Name	Input/Output	Function
1	+24V DC	Input	Input Voltage
2	+24V DC	Input	Input Voltage
3	P-GND	—	GND
4	P-GND	_	GND
5	P-GND	—	GND

Connector used: 5267-05A-X (Molex)

CAUTION:

- 4) Use only the specified AC adapter.
- 5) When disconnecting/reconnecting the cable connector of the AC adapter, be sure to hold the connector.
- 6) Several holes have been prepared on the unit so that the power connector or interface connector can be easily attached. Never use the same hole for both the power connector and interface connector at the same time.
- 4) Separate the AC adapter from other noise-generating devices.
- 5) Pulling the AC power cord may damage it, resulting in a fire, electric shock, or snapping.

- 6) If a thunder/lightning storm is nearby, disconnect the AC adapter from the socket and do not use the printer, because a fire or electric shock may occur.
- 7) Do not put the AC power cord close to a heating device. Its coating can melt and cause a fire or electric shock.
- 8) Install the printer in a well-ventilated place, because the AC adapter generates heat when it is used.
- 9) Use the specified AC power source. Connect to a power source with sufficient capacity. If the capacity is insufficient, a fire may result from heat generation.
- 10) After using the printer or when not using it for a long period of time, be sure to unplug the AC adapter from a plug socket for your safety.

4.2 Connecting the Interface Cable

- 1. Turn off the power. (Mating side included)
- 2. Check the top and bottom of cable terminals, and connect the cable terminal to the interface connector.
- 3. Fix the cable terminals.

Serial interface : Tighten screws, to fix it.

Parallel interface : Turn stoppers, to fix it.

- 4. Connect the cable to the host computer.



* This shows how to connect to the rear end of the frame.

You can attach the interface cable to any one of the 4 positions shown below. See the table below for details on the CN10 connector pin configurations.



[Connector's pin configurations for parallel interface (CN10)]

No.	Signal Name	Input/Output	Function
1	_	_	_
2	—	—	_
3	—	—	_
4	—	—	
5	STB	Output	STB Signal
6	BUSY	Output	BUSY Signal
7	ACK	Output	ACK Signal
8	DATA0	Input	DATA0 Signal
9	DATA1	Input	DATA1 Signal
10	DATA2	Input	DATA2 Signal
11	DATA3	Input	DATA3 Signal
12	DATA4	Input	DATA4 Signal
13	DATA5	Input	DATA5 Signal
14	DATA6	Input	DATA6 Signal
15	DATA7	Input	DATA7 Signal
16	PE	Output	PE Signal
17	FAULT	Output	FAULT Signal
18	RESET	Input	RESET Signal
19	GND	—	GND
20	Vcc		+5V DC

Connector used: 53313-2015 (Molex)

No.	Signal Name	Input/Output	Function
1	DTR	Output	DTR Signal
2	TXD	Output	TXD Signal
3	RXD	Output	RXD Signal
4	DSR	Output	DSR Signal
5	—	—	—
6	—	_	—
7	—	—	—
8	—	_	—
9	—	_	—
10	—	_	—
11	—	_	—
12	—	_	—
13	—	_	—
14	—	_	—
15	—	—	—
16	—	—	—
17	—	—	—
18	—	—	—
19	GND	—	GND
20	Vcc	—	+5V DC

[Connector's pin configuration for serial interface (CN10)]

Connector used: 53313-2015 (Molex)

CAUTION:

- 1) Referring to "6. PARALLEL INTERFACE" and "7. SERIAL INTERFACE," check the pin configuration of the interface connector and cable. Wrong wiring could cause trouble or malfunctioning to not only the unit but also the host computer.
- 2) When disconnecting/reconnecting the interface cable, be sure to hold the connector. Pulling the cable itself may snap the internal wires.
- 3) Connect the interface cable securely. Otherwise, communications may not be obtained due to a connection failure.

4.3 Inserting the Paper

- 1) Be sure to use the specified paper roll.
- 2) Use of non-specified paper may not guarantee the print quality, printing head life, presenter operation, and so on.
- 3) Do not insert a ragged or dog-eared end of the paper roll, because it could result in a paper jam or insertion error.



- 1. Cut the front end of the paper roll almost at a right angle.
- 2. Insert the paper roller of the paper holding unit into the core of the paper roll as shown in the figure on the next page.
- 3. Make sure the paper winding direction and put the paper roll onto the PHU.
- 4. Make sure that the power is turned on.
- 5. If there is still some paper remaining after a paper-out indication, eliminate the paper roll according to "4.4 How to Remove the Remaining Paper Roll."
- 6. Raise the head-up lever of the printer/presenter unit. (See the next page.)
- 7. Insert the front end of the paper roll straight into a paper insertion slot as shown in the figure on the next page, until the paper stops.
- 8. Put back the head-up lever. The paper is automatically pulled in by the platen roller to feed a constant amount of paper. (When auto-loading is enabled.) Remove the cut paper to enable printing.

- 1) If the paper roll is still slack, rewind the paper to remove the slack.
- 2) If the paper roll is tilted, raise the head-up lever to correct the paper roll position, or pull out



4.4 How to Remove Remaining Paper Roll

- 1. Raise the head-up lever of the printer/presenter unit.
- 2. Gently pull out the paper from the printer/presenter unit. If the paper roll is still remaining, cut it just before the paper insertion slot before pulling it out.

CAUTION:

- 1) Never take out paper with the head-up lever lowered, because it could damage the printing head.
- 2) The printer mechanism may be very hot just after printing, so be duly careful.

4.5 Eliminating the Paper Jam

4.5.1 Eliminating a Jam in the Printer Mechanism

- 1. Turn off the power.
- 2. Cut the paper roll near the paper insertion slot.
- 3. Move the knobs on both sides in the direction indicated by the arrows to detach the auto cutter from the printer mechanism.
- 4. Raise the head-up lever to detach the head from the platen roller.
- 5. Rotate the knob of the printer mechanism and totally remove the paper roll that is left in the paper passage.
- 6. Lower the head-up lever to return the printer mechanism to its original position.

CAUTION:

- 1) The printer head gets very hot. Do not attempt any maintenance directly after printing.
- 2) When you wish to remove the unused portion of the paper, do not touch the hot surface of the printer head with your bare hands or a piece of metal.



4.5.2 Eliminating a Jam in the Presenter

- 1. Turn off the power.
- 2. Open the front door by pulling while pressing on the knob (see the figure).
- 3. Manually turn the roller until all paper is removed from the paper passage.
- 4. If a jam occurs between the auto-cutter and the presenter, with tweezers or similar, remove the paper roll with the utmost care.
- 5. Firmly close the front door.

If the presenter rollers do not spin, do not apply extra force as this could break the mechanism.



4.6 Releasing a Locked Cutter

When the auto-cutter locks up and fails to cut paper, follow these steps to solve the problem.

- 1. Remove the paper from the paper passage as described in "4.5 Eliminating the Paper Jam".
- 2. Turn on the power. The auto cutter initialization begins and the cutter returns to its home position.
- 3. If the cutter does not return to its home position after the power has been turned on, do the following. Turn off the power, and return the auto cutter blade to its home position by turning the emergency knob of the auto cutter in the direction indicated by the arrow.
- 4. With tweezers or similar, totally remove remaining paper from the cutter blade area.



4.7 FEED Switch Function

Press the feed switch to feed the paper, cut it, and output the cut portion.

4.8 Paper End Function

If the printing paper runs out, the parallel interface will output BUSY, FAULT, and PE to the host, and the serial interface will output DTR to stop printing, respectively. If some data are still remaining in the buffer, printing will be resumed after replacing the paper. Replace the paper according to "4.3 Inserting the Paper." After replacing the paper, cancel BUSY (DTR), FAULT, and PE outputs. For details, see "4.10 Near Paper End Function."

4.9 Connecting the PHU (Paper Holding Unit)

- 1. Turn off the power.
- 2. Plug the connector cable of the optional PHU into the CN5 on the control PCB. When plugging it, pay attention to its insertion direction.



4.10 Paper Near End Function (When Using the PHU)

If the paper is running out, the PNE sensor informs the host computer that the paper is running out. You can adjust the printable amount left after PNE has been detected, up to about₀50 of paper roll.

- 1. Loosen the screw and slide the PNE sensor position forward or backward. When you slide the PNE sensor away from the paper roller, the printable amount left after PNE has been detected will be increased.
- 2. When replacing the paper, replace it according to the procedure in "4.3 Inserting the Paper."



4.11 Auto-Loading Function

This printer has a function to automatically set the paper. When the paper is set and the

paper end sensor and paper near end sensor are not detected, and the head-up lever is lowered, the paper will be automatically fed by a constant amount in about 1 second.

If the paper is not automatically fed, remove the paper from the paper insertion slot and try again.

You can use the DIP switch to enable/disable the function. If disabled, auto-loading will not be performed.

CAUTION:

- 1) When auto-loading is being activated, do not touch the paper roll, because it could result in a paper feed failure or cause the paper to be one-sided.
- 2) Be sure to set the paper until it comes into contact with the platen roller; otherwise, the paper cannot be fed and the printing head could be damaged.

4.12 Self-Print Function

This unit has a function to perform preset printing. Turn on the power with the FEED switch held down. It will print the ROM version, DIP switch state, characters used, etc. After self-printing is completed, the printer restores its normal operating conditions.

CAUTION:

Do not use this function when the paper roll is running out.

5. DIP SWITCH SETTING

5.1 Location of DIP Switch

The following figure clearly shows where the DIP switches are.

Any settings made while the power is turned on will not take effect. Turn the power on after you set the DIP switches.

- 1. Turn off the power.
- 2. Remove the DIP switch cover screw. (Be careful not to lose the screw.)
- 3. Slide the cover towards you and lift it to remove (see arrows in the figure).
- 4. Set the DIP switches.
- 5. After you have made the required settings, reattach the cover and screw.

- 1) The DIP switch cover has sharp edges. Be careful not cut your fingers.
- 2) The screw is an M 2x3mm type. Do not use any other type. If you do lose it, replace it with the same type. Do not use screws that are longer than 3mm.
- 3) Always turn off the power before setting. If you make settings while the power is on, the unit may become faulty.
- 4) Do not use anything sharp and pointy to set the DIP switches.
- 5) Always set the switches that have been specified as disabled to OFF (the setting that existed when shipped).
- 6) Do not use the unit while the DIP switch cover is removed.


5.2 DIP Switch Function

DIP switch 1 (DS1)

No.	Function	ON	OFF	Upon Shipment
DS1- 1	Auto cutter	Enabled	Disabled	ON
2	CR switching	LF operation	Ignored	ON
3	Printing density	Combination See Ta	n with DS2-6. able 2.	OFF
4	DTR-DSR/XON-XOFF	XON–XOFF	DTR-DSR	OFF
5	Baud rate and parity setting			OFF
6	Baud rate and parity setting	See Table 1. OFF OFF		OFF
7	Baud rate and parity setting			OFF
8	Baud rate and parity setting			OFF

DIP switch 2 (DS2)

No.	Function	ON	OFF	Upon Shipment
1	PNE function	Enabled	Disabled	ON
2	Reserved			ON
3	Reserved			ON
4	Auto-loading	Enabled	Disabled	ON
5	Paper selection	Normal	Dedicated	ON
		thermal paper	thermal paper	
			(Black mark)	
6	Print density	Combination	n with DS1-3.	ON
		See Table 2.		
7	Data length	8 Bits	7 Bits	ON
8	Not used			ON

Table 1 Baud rate and parity setting

DS1-8	DS1-7	DS1-6	DS1-5	Interface	Parity	Baud Rate
OFF	OFF	OFF	OFF	Parallel input		_
OFF	OFF	OFF	ON	Serial input	None	1,200 bps
OFF	OFF	ON	OFF	"	"	2,400 bps
OFF	OFF	ON	ON	"	"	4,800 bps
OFF	ON	OFF	OFF	"	"	9,600 bps
OFF	ON	OFF	ON	"	"	19,200 bps
OFF	ON	ON	OFF	"	Odd	1,200 bps
OFF	ON	ON	ON	"	"	2,400 bps
ON	OFF	OFF	OFF	"	"	4,800 bps
ON	OFF	OFF	ON	"	"	9,600 bps
ON	OFF	ON	OFF	"	"	19,200 bps
ON	OFF	ON	ON	"	Even	1,200 bps
ON	ON	OFF	OFF	"	"	2,400 bps
ON	ON	OFF	ON	"	"	4,800 bps
ON	ON	ON	OFF	"	"	9,600 bps
ON	ON	ON	ON	"	"	19,200 bps

Table 2	Print	density
		ucharty

DS1-3	DS2-6	Print Density	Level
OFF	OFF	Light	0
OFF	ON	Standard	1
ON	OFF	Dark	2
ON	ON	Darker	3

6. PARALLEL INTERFACE

6.1 Specifications

 Data input system 	: 8-bit parallel (DATA0 to DATA7)
 Control signals 	: ACK, BUSY, STROBE, FAULT, PE, RESET
•Applicable connectors	: Printer side : 57LE-40360 (Anphenol) or its equivalent
	Cable side : 57-30360 (Anphenol) or its equivalent

6.2 Connector's Pin Configuration

No.	Signal Name	No.	Signal Name	
1	STROBE	19	TWISTED PAIR GND	
2	DATA 0	20	\uparrow	
3	DATA 1	21	\uparrow	
4	DATA 2	22	\uparrow	
5	DATA 3	23	\uparrow	
6	DATA 4	24	\uparrow	
7	DATA 5	25	\uparrow	
8	DATA 6	26	\uparrow	
9	DATA 7	27	\uparrow	
10	ACK	28	\uparrow	
11	BUSY	29	\uparrow	
12	PE	30	\uparrow	
13		31	RESET	
14		32	FAULT	
15		33		
16		34		
17	FRAME GND	35		
18		36		
18 000000000000000000000000000000000000				

6.3 Input and Output Signals

6.3.1 Input and Output Signals

- (1) Input signals to the printer
 - •DATA : 8-bit parallel signal (Active: "High")
 - •STROBE : Strobe signal to read the 8-bit data (Active: "Low")
 - •RESET : Signal to reset the entire printer (Active: "Low"); 1 ms or more

(2) Output signals from the printer

- •ACK : 8-bit data request signal. A pulse signal to be output at the end of the BUSY signal (Active: "Low")
- •BUSY : Signal to indicate that the printer is busy. Input new data when it is "Low." (Active: "High")
- •FAULT : Turned to "Low" when the printer has an alarm. At this time, all the control circuits in the printer stop. (Active: "Low")
- •PE : Output if the printing paper has run out or is running out. (Active: "High")

6.3.2 Electrical Characteristics

- (1) Input signal level
 All the input signals are at the TTL level.
 High level --- 2.0 V at minimum
 Low level --- 0.8 V at maximum
- (2) Output signal level
 All the output signals are at the TTL level.
 High level --- 2.4 V at minimum
 Low level --- 0.4 V at maximum
- (3) Input and output conditions The STROBE and RESET input signals are pulled up at $3.3k\Omega$, and the other input signals at $50k\Omega$, respectively.



All the output signals are pulled up at $50k\Omega$.



6.3.3 Timing Chart

Data Input and Print Timings



- T₅ 2.3 μs TYP
- T₆ 500 ms MIN (At power-on)

6.3.4 Data Receiving Control

The data can be received from the host when the BUSY signal is at "Low," but cannot be received when it is "High."

6.3.5 Buffering

The host side is immediately freed, because 4 KB data can be buffered.

7. SERIAL INTERFACE

7.1 Specifications

- (1) Synchronous system : Asynchronous
- (2) Baud rate : 1,200, 2,400, 4,800, 9,600, 19,200 bps (Selected by the user)
- (3) 1-word configuration
 - Start bits : 1 bit
 - Data bits : 8 bits or 7 bits (Setting upon shipment)
 - Parity bits : Odd, even, or no parity (Selected by the user)
 - Stop bits : 1 bit or more
- (4) Signal polarity
 - RS-232C
 - •Mark = Logic "1" (-3 ~ -12 V)
 - •Space = Logic "0" (+3 ~ +12 V)
- (5) Received data (RXD signal)
 - •Mark = 1
 - •Space = 0
- (6) Reception control (DTR signal)
 - •Mark : Data not transferable
 - •Space : Data transferable
- (7) Transmission control (TXD signal)
 - •DC1 code(11H) X-ON : Data receivable
 - •DC3 code(13H) X-OFF : Data not receivable

7.2 Connector's Pin Configuration

No.	Signal Name	Input/Output	Function	
1	FG		Frame Ground	
7	GND		Signal Ground	
3	RXD	Input	Received Data	
20	DTR	Output	Printer BUSY Signal	
2	TXD	Output	Transmitted Data	
6	DSR	Input	Data Set Ready	
13 25 00000000000000000000000000000000000				

[Note] 1. The RS-232C signals are based on the EIA RS-232C.

2. The received data should be always maintained in the Mark status when no data is being transferred.

Applicable connectors (D-Sub connectors)

Printer side : 17LE-13250 (Anphenol) or its equivalent

Cable side : 17JE-23250 (Anphenol) or its equivalent

7.3 Input and Output Signals

7.3.1 Input and Output Signals

(1) RXD

Serial received data signal. If a framing error, overrun error, or parity error takes place, the relevant data will be printed as "?".

(2) DTR

Write the data or a command when this signal is Ready. If you write at Busy, the previous data will be ignored, resulting in an overrun error. The data can be written in the input buffer even during printing. Busy is also issued at power-on, during test printing, at on-line, or at reset.

(3) TXD

If the remaining capacity of the input buffer comes to 128 bytes or less while receiving the data, DC3(13H) will be output as a data not receivable signal. If the remaining capacity comes to 256 bytes or more, DC1(11H) will be output to the host side as a data receivable signal.

When sending the status information, it is confirmed that DSR is a space prior to sending the data, if DTR/DSR control has been selected. If DTR/DSR control has not been selected, the data will be sent, ignoring the DSR signal.

(4) FG

Ground for the case

(5) GND

Common ground for the circuits

7.3.2 Data Configuration



(1) Start bit

The system reads the status again after a lapse of 1/2 bit from a fall edge from the mark to space, and if it is a space, this bit will be recognized as the start bit.

If it is a mark, the system will not recognize the bit as the start bit and try to detect the start bit again without judging it as an error.

(2) Data bits + Parity bit

The system samples the data bits and parity bit for the 1 bit worth of time from 1/2 start bit and assumes the then status as the data for the relevant bits. The bits are called Bit 0, Bit 1, ..., Parity bit, counting from the one closest to the start bit.

(3) Stop bit

The stop bit is the Mark level of 1 bit or more. If a space is detected in detecting the stop bit, a framing error will result.

7.3.3 Error Detection

The system detects a parity, framing, or overrun error. If an error is detected, the relevant data will be stored in the buffer as "?".

(1) Parity error

With a parity check specified, if an error is detected at parity check time, the relevant data will be stored in the buffer as "?".

(2) Framing error

This error results if the Space status is detected at stop bit detection time. The relevant data will be stored in the buffer as "?".

(3) Overrun error

If an overrun error is detected, the relevant data will be stored in the buffer as "?".

7.3.4 Data Receiving Control

If DTR/DSR control has been selected, the data from the host side will be received when the BUSY signal is at "Low," but not received when at "High." If DTR/DSR has not been selected, the data from the host side will be received after sending XON, but not after sending XOFF.

7.3.5 Buffering

To transfer the data to the input buffer, there are two control signals available: DTR signal and TXD signal. The host side is immediately freed, since the data can be buffered up to 4 KB.

- (1) DTR signal (See 7.3.1-(2))
- (2) TXD signal (See 7.3.1-(3))

7.3.6 Electrical Characteristics

RS-232C Circuit

Input (RXD, DSR)



8. POWER CONNECTOR

This connector is to supply the power from the special AC adapter (31AD).



Connector's Pin Configurations

Connector used: TSC7960-53-2010 (Made by HOSHIDEN) or its equivalentApplicable connector: TSC8927-63-1100 (Made by HOSHIDEN) or its equivalentTSC8927-53-1100 (Made by HOSHIDEN) or its equivalent

CAUTION:

- 1) Be sure to use the specified AC adapter. Use of any other power source could cause trouble to or break the printer.
- 2) Do not connect the power source with different polarity.
- 3) After using the printer or when not using it for a long period of time, be sure to unplug the AC adapter from a plug socket for your safety.

9. MAINTENANCE AND SERVICE

For the information on maintenance and service, please contact our dealer or at the following address.

Northern America CBM America Corporation Service Center 365 Van Ness Way Suit 510 Torrance, CA 90501, U.S.A. Other Areas Japan CBM Corporation Information Systems Division CBM Bldg., 5-68-10, Nakano Nakano-ku, Tokyo 164-0001 Japan

<u>TEL +1-310-781-1460</u> <u>FAX +1-310-781-9157</u> TEL +81-3-5345-7540 FAX +81-3-5345-7541

10. PRINT CONTROL FUNCTIONS

10.1 Commands List

	Control Code	Function	Code	Page
1	HT	Horizontal tab	09H	40
2	LF	Printing and paper feed	0AH	40
3	CR	Print	0DH	41
4	ESC SP	Setting the right space amount of the character	1BH 20H n	41
5	ESC !	Collective specifying printing mode	1BH 21H n	42
6	ESC %	Specifying/canceling download character set	1BH 25H n	44
7	ESC &	Defining download characters	1BH 26H s n m	
	1		[a p1 p2 ps×a]	45
			m-n+1	
8	ESC *	Specifying the bit image mode	1BH 2AH m n1	17
	1		n2 [d]k	47
9	ESC –	Specifying/canceling underline	1BH 2DH n	49
10	ESC 2	Specifying 1/6-inch line feed rate	1BH 32H	49
11	ESC 3	Setting line feed rate of minimum pitch	1BH 33H n	50
12	ESC =	Data input control	1BH 3DH n	51
13	ESC @	Initializing the Printer	1BH 40H	52
14	ESC D	Setting horizontal tab position	1BH 44H [n]k 00H	53
15	ESC E	Specifying/canceling highlighting	1BH 45H n	54
16	ESC G	Specifying/canceling double printing	1BH 47H n	55
17	ESC J	Printing and feeding paper n/203 inch	1BH 4AH n	55
18	ESC R	Selecting the international character set	1BH 52H n	56
19	ESC V	Specifying/Canceling 90°-right- turned Characters	1BH 56H n	57
20	ESC a	Aligning the characters	1BH 61H n	58
21	ESC c3	Selecting the paper near end sensor valid for a paper end signal stop	1BH 63H 33H n	59
22	ESC c4	Selecting the paper near end sensor valid for print stop	1BH 63H 34H n	59
23	ESC c5	Enabling/disabling the panel switches	1BH 63H 35H n	60
24	ESC d	Printing and feeding the paper by n lines	1BH 64H n	60
25	ESC i	Activating auto cutter (Full cut)	1BH 69H	61
26	ESC m	Activating auto cutter (Partial cut)	1BH 6DH	62
27	ESC p	NOP		
28	ESC t	Selecting the character code table	1BH 74H n	63
29	ESC u	NOP		
30	ESC v	Transmitting the printer status (Serial type)	1BH 76H n	64
31	ESC {	Specifying/canceling the inverted characters	1BH 7BH n	65
32	ESC \$	Specifying the absolute positions	1BH 24H n1 n2	66
33	ESC ¥	Specifying the relative positions	1BH 5C n1 n2	67
34	GS k	Printing the bar code	1DH 6BH n ["d"]k 00H	68
35	GS w	Selecting the horizontal size (scale factor) of bar code	1DH 77H n	72
36	GS h	Selecting the height of the bar code	1DH 68H n	73
37	GS H	Selecting of print position of HRI code	1DH 48H n	74

	Control Code	Function	Code	Page
38	GS f	Selecting the font of HRI code	1DH 66H n	75
39	GS *	Defining the download, bit image	1DH 2AH n1 n2 [d] n1 ×n2×8	76
40	GS /	Printing the download, bit image	1DH 2FH m	78
41	GS :	Starting/ending macro definition	1DH 3AH	79
42	GS ^	Executing the macro	1DH 5EH n1 n2 n3	80

- Notes 1. n, n1, n2, n3, n4, n5, n6, m, a, s, p, d, N1, N2, N3,N4, and N5 in the table are parameters for each commands.
 - 2. []k in the table denotes k-times of repeat.
 - 3. Characters shown in " " are the ASCII characters.

10.2 Command Details

10.2.1 Description of Items

XXXX	ALL
[Function]	Command Function
[Code]	A sequence of code constituting a command is represented in hexadecimal number for < >H, binary number for < >B, and decimal number for < >, respectively; []k represents a repeat count of k-times.
[Range]	Describes an argument value (Setting range) for the command.
[Outline]	Describes a command outline.
[Caution]	Describes a caution as required.
[Default]	Describes an initial value for the command when accompanied by an argument.
[See Also]	Describes the associated commands for use.
[Sample Program]	 Describes a coding example in the Q-BASIC sample program. This example is only for your reference and differs depending on the language used, version, and so on. For details, see the manual for the language used.

10.2.2 Details

<u>HT</u>

[Function]	Horizontal Tab
[Code]	<09>H
[Outline]	Shifts the printing position to the next horizontal tab position.
	 Ignored when the next horizontal tab position has not been set.
[Caution]	 The horizontal tab position is set by ESC D.
	 Initial setting of the horizontal tab position is each 8 characters in 9th, 17th, 25th, columns.
[See Also]	ESC D
[Sample Program	n]
	LPRINT "0123456789012345678901" ;
	LPRINT CHR\$ (&HA) ;
	LPRINT CHR\$ (&H9) + "AAA" ;
	LPRINT CHR\$ (&H9) + "BBB" ;
	LPRINT CHR\$ (&HA);
	LPRINT CHR\$ (&H1B) + "D" ;
	LPRINT CHR\$ (3) + CHR\$ (7) + CHR\$ (14) + CHR\$ (0) ;
	LPRINT CHR\$ (&H9) + "AAA" ;
	LPRINT CHR\$ (&H9) + "BBB" ;
	LPRINT CHR\$ (&H9) + "CCC" + CHR\$ (&HA) ;
[Print Results]	
0123	345678901234567890 1
	AAA BBB
	AAA BBB CCC \leftarrow When set to the 4th, 8th, and 15th digits

<u>LF</u>_____

[Function] [Code]	Printing and Paper Feed <0A>H		
[Outline]	Prints data inside the input buf amount having been set.The head of the line becomes the second s	fer and feeds line	es based on the line feed
[See Also]	ESC 2, ESC 3		
[Sample Program]		[Print Results]	
LPRI	NT "AAA" + CHR\$ (&HA) ;	AAA	Print and line feed
	NT CHD\$ (8.HA) ; NT CHD\$ (8.HA) ;	BBB	← Print and line feed ← Line feed only
LPRI	NT "CCC" + CHR\$ (&HA) ;	CCC	← → Print and line feed

CR

[Function]	Print		
[Code]	<0D>H		
[Outline]	 When DS 1 -2 is OFF: This command is ignored. 		
	2) When DS 1- 2 is ON:		
	With data held inside the i performed.	internal print buffe	r, printing and line feed are
	Without data inside the i performed.	internal print buff	er, however, no printing is
[See Also]	LF		
[Sample Program	ר]	[Print Result	ts]
LP LP LP	RINT "AAA" + CHR\$ (&HD) ; RINT "BBB" + CHR\$ (&HD) ; RINT CHR\$ (&HD) ;	AAA BBB	Print and line feed Print and line feed Line feed only
LP	PRINT "CCC" + CHR\$ (&HD) ;	CCC	← → Print and line feed

ESC SP n

[Function]	Setting the right space amount of the character
[Code]	<1B>H<20>H <n></n>
[Range]	$\{0 \le n \le 20\}$ Data is described in Hex code.
[Outline]	The rightward space amount is set in dot unit (1/203 inch unit). In the initial value, it is n=0.
[Caution]	The rightward space amount in double wide mode is made double of the set volume.
[Default]	n = 0
[Sample Program]	
	LPRINT CHR\$ (&H1B) + " " + CHR\$ (0) ;
	LPRINT "AAAAA" + CHR\$ (&HA) ;
	LPRINT CHR\$ (&H1B) + " " + CHR\$ (1) ;
	LPRINT "AAAAA" + CHR\$ (&HA) ;
	LPRINT CHR\$ (&H1B) + " " + CHR\$ (12) ;
	LPRINT "AAAAA" + CHR\$ (&HA) ;
[Print Results]	
AA	$AAA \leftarrow 0$ -dot space
A A	$A A A \leftarrow 1$ -dot space
А	$A A A \leftarrow 12 \text{-dot space}$

<u>ESC ! n</u>

[Function]	Collective Specifying Printing Mode			
[Code]	<1B>H<21>H <n></n>			
[Range]	$\{0 \le n \le FF\}$ Data is described in Hex code.			
[Outline]	Printing mode is assigned. Each n bit indicates the following:			

D:+	Function	Value			
ы	Function	0	1		
0	Character Font	Font A	Font B		
1	Undefined				
2	Undefined				
3	High-lighting	Canceled	Specified		
4	Double height	Canceled	Specified		
5	Double width	Canceled	Specified		
6	Undefined				
7	Underline	Canceled	Specified		

[Caution]

- With double height and double width being specified simultaneously, double wide and double high characters are consisted.
- An underline is attached to the full character width, which, however, is not attached to the part having been skipped by the horizontal tab.
 Neither is it attached to 90°-right-turned characters.
- The underline width is as having been specified by <ESC >. (The default setting is 1 dot width.)
- Specification with this command is invalid to Kanji, except specification and cancellation of highlighting
- In case that double wide character and normal character exist in same one line, the layout of underline is consistent one.

[Default] n = 0 [See Also] ESC E, ESC –

[Sample Program]

LPRINT CHR\$ (&H1B) + " ! " + CHR\$ (&H00) + "H" ;
LPRINT CHR\$ (&H1B) + " ! " + CHR\$ (&H01) + "H";
LPRINT CHR\$ (&H1B) + " ! " + CHR\$ (&H08) + "H";
LPRINT CHR\$ (&H1B) + " ! " + CHR\$ (&H10) + "H";
LPRINT CHR\$ (&H1B) + " ! " + CHR\$ (&H20) + "H";
LPRINT CHR\$ (&H1B) + " ! " + CHR\$ (&H80) + "H";
LPRINT CHR\$ (&H1B) + " ! " + CHR\$ (&HB9) + "H";
LPRINT CHR\$ (&HA) ;

[Print Results]



ESC % n

[Function]	Specifying/	Canceling Download Cha	racter S	Set	
[Code]	<1B>H<25	<1B>H<25>H <n></n>			
[Range]	$\{0 \le n \le FF\}$ data is described in Hex code.				
[Outline]	Specifying/	canceling download chara	acters.		
	Further, or	nly the lowest bit (n0) is v	alid for	n.	
	The lowest	bit (n0) indicates the follo	owing.		
	n0	Funct	ion		
	0	Canceling downloa	ad chara	acter set	
	1	Specifying downlo	ad char	acter set	
[Caution]	Download	characters and downlo	ad bit	images can not be defined	
	simultaneo	usly.			
[Default]	n = 0				
[See Also]	ESC &				
[Sample Program]					
	GOSUB SET	CHR	DATA	6	
	LPRINT CHR\$ (&H1B) + "%" + CHR\$ (0) ; DATA &HFF, &H80, &H00			&HFF, &H80, &H00	
	LPRINT "@A	" + CHR\$ (&HA) ;	DATA	&H80, &H80, &H00	
	LPRINT CH	R\$ (&H1B) + "%" + CHR\$ (1)	; DATA	&H80, &H80, &H00	
	LPRINT "@A	" + CHR\$ (&HA) ;	DATA	&H80, &H80, &H00	
	END		DATA	&HFF, &HFF, &HFF	
	SETCHR :		DATA	&HFF, &HFF, &HFF	
	LPRINT CH	R\$ (&H1B) + "&" ;	DATA	12	
	LPRINT CH	R\$ (3) + "@" + "A" ;	DATA	&HFF, &HFF, &HFF	
	FOR J=1 T	D 2	DATA	&H80, &H07, &HF9	
	READ REP		DATA	&H80, &HFF, &HF9	
	LPRINT CH	HR\$ (REP) ;	DATA	&H87, &HFE,&H01	
	FOR I=1 T	O REP*3	DATA	&H9F, &H06, &H01	
	READ D		DATA	&HF8, &H06, &H01	
	LPRINTO	CHR\$ (D) ;	DATA	&HF8, &H06, &H01	
	NEXT I		DATA	&H9F, &H06, &H01	
	NEXT J		DATA	&H87, &HFE,&H01	
	RETURN		DATA	&H80, &HFF, &HF9	
			DATA	&H80, &H07, &HF9	
			DATA	&HFF, &HFF, &HFF	
[Print Results]					
@ A	← Inter	rnal Character Set			

☐ ि ← Download Character

<u>ESC & s n m[a[p]s×a]m–n+1</u>

[Function]	Defining Download Character					
[Code]	<1B>H<26>H <s><n><m> [<a><p1><p2>••<psxa>]m-n+1</psxa></p2></p1></m></n></s>					
[Range]	${s = 03}$					
	{20 (Hex) ≤ n ≤ m ≤ 7E (Hex)}					
	$\{0 \le a \le 0C(Hex)\}$ (Font A)					
	$\{0 \le a \le 0A(Hex)\}$ (Font B)					
[Outline]	Defines the font of download characters of alphanumeric characters.					
	 "s" indicates the number of bytes in vertical direction. 					
	• "n" indicates the start character code and m the end character code. To					
	define only one character, set n=m.					
	 Character codes definable includes 95 ASCII codes in total between <20>H~<7E>H. 					
	 "a" indicates the number of dots in horizontal direction for definition. "p" is the data to be defined, which indicate a pattern equal to "a" dot in 					
	horizontal direction from the left end. The rest of the pattern on the right side is filled with space.					
	The rest of data to be defined is s x a.					
	 Download characters thus defined remain valid until redefinition, 					
	ESC @ execution, GS * execution, or power OFF is practiced.					
[Caution]	Download characters and download bit images can not be defined					
	simultaneously.					
	Running this command clears the definition of the download bit image.					
[Default]	Same as the internal character set					

[Example]



Create each data bit by setting "1" for a printed dot and "0" for an unprinted dot.

[Sample Program]

[Print Results]

See Sample Program and Print Results for ESC % on Page 44.

<u>ESC * m</u> i	<u>n1 n2 [c</u>	<u>4] k</u>				
[Function]	Specifyir	ng the Bit Imag	e Mode			
[Code]	<1B>H<	<1B>H<2A>H <m><n1><n2> [<d>] k</d></n2></n1></m>				
[Range]	$\{m=0, 1, 0 \le n1 \le 0 \le n2 \le 0 \le d \le r1 \le 0 \le d \le r1 \le 0 \le d \le r1 + 0 \le r1 $	$\{m = 0, 1, 32, 33 \text{ bit image mode (See the table below.)} \}$ $\{0 \le n1 \le FF(Hex)\}$ $\{0 \le n2 \le 03(Hex)\}$ $\{0 \le d \le FF(Hex)\}$ $\{k = n1 + FF(Hex) \times n2 \qquad (m = 0, 1)$				
[Outline]	[Outline] According to the number of dots specified in n1, n2, specify the bit image mode n.				fy the bit image o	
	 The N and re The to When line(4) d is binot as 	 The No. of dots printed is divided by 256, whose quotient is taken as n2 and residualas n1. The total no. of dots printed in the bit image is equal to n1 + (256 x n2). When bit image data have been input in excess of dot position of one line(448 dots), the excess data are discarded. d is bit image data, the bits subject to printing are taken as "1" and those not as "0". 				
	• The b	it image modes	specified by m ar	e shown as follo	WS:	
m(Hex)	Mode	Vertica No. of Dots	l Direction Dot Density	Horizont Dot Density	al Direction Max. No. of Dots	
			·····			

m(Hex)	Mode	Vertical Direction		Horizontal Direction	
		No. of Dots	Dot Density	Dot Density	Max. No. of Dots
0	8-dots single density	8	67 DPI	101 DPI	288
1	8-dots double density	8	67 DPI	203 DPI	576
20	24-dots single density	24	203 DPI	101 DPI	288
21	24-dots double density	24	203 DPI	203 DPI	576

[Caution]

- When the values set in m (bit image mode) are out of the above range, the data following after n1 is processed as normal printing data.
- After completion of bit image printing, printer returns to normal data processing mode.



GOSUB IMG1 LPRINT CHR\$ (&HA) ; LPRINT CHR\$ (&H1B) + "*" ; LPRINT CHR\$ (1) + CHR\$ (20) + CHR\$ (0) ; GOSUB IMG1 LPRINT CHR\$ (&HA) ; LPRINT CHR\$ (&H1B) + "*" ; LPRINT CHR\$ (32) + CHR\$ (20) + CHR\$ (0) ; GOSUB IMG2 LPRINT CHR\$ (&HA) ; LPRINT CHR\$ (&H1B) + "*" ; LPRINT CHR\$ (33) + CHR\$ (20) + CHR\$ (0) ; GOSUB IMG2 LPRINT CHR\$ (33) + CHR\$ (20) + CHR\$ (0) ; GOSUB IMG2 LPRINT CHR& (&HA) ; END LPRINT CHR\$ (&HFF) ; FOR I=1 TO 18 LPRINT CHR\$ (&H85); NEXT I LPRINT CHR\$ (&HFF); RETURN IMG2; LPRINT CHR\$ (&HFF) ; LPRINT CHR\$ (&HFF) ; LPRINT CHR\$ (&HFF) ; FOR I=1 TO 18 LPRINTCHR\$ (&H80); LPRINTCHR\$ (&H00); LPRINTCHR\$ (&H05); NEXT I LPRINT CHR\$ (&HFF) ; LPRINT CHR\$ (&HFF) ; LPRINT CHR\$ (&HFF) ; RETURN

[Print Results]





<u>ESC – n</u>

[Function]	Specifying/Canceling Underline				
[Code]	<1B>H<2D>H <n></n>				
[Range]	$\{0 \le n \le 02\}$ data is described in Hex code.				
[Outline]	Specifying/canceling an underline.				
	 Types of underlines by n value are shown below: 				
	n (Hex) Type				
	0 Canceling an underline.				
	1 Specifying an underline for 1-dot width.				
	2 Specifying an underline for 2-dots width.				
[Caution]	• An underline is attached to the full character width. It is, however, not				
	attached to the part having been skipped by horizontal tab command.				
	 An underline is not attached to a 90 °- right-turned characters. 				
	 Specification/cancellation with this command is invalid to Kanji. 				
[See Also]	ESC !, FS –				
[Sample Program]					
LPRINT CHR\$ (&H1B) + "–" + CHR\$ (0) ;					
	LPRINT "AAAAA" ;				
	LPRINT CHR\$ (&H1B) + "–" + CHR\$ (1) ;				
	LPRINT "AAAAA" + CHR\$ (&HA) ;				
[Print Results]	Underline Canceled				
	<u>ÀAAAAAAAA</u>				
	← → Underline Specified				
ESC 2					

[Function] [Code] [Outline] [Sample Program]	Specifying 1/6-inch Line Feed Rate <1B>H<32>H The line feed rate per line is specified [Pr	by 1/6 inch. int Results]	
LPRIN	LPRINT "AAAAA" + CHR\$ (&HA) ; LPRINT CHR\$ (&H1B) + "3" + CHR\$ (0) ; LPRINT "AAAAA" + CHR\$ (&HA) ; LPRINT CHR\$ (&H1B) + "3" + CHR\$ (50) ; LPRINT "AAAAA" + CHR\$ (&HA) ; LPRINT CHR\$ (&H1B) + "2" ; LPRINT CHR\$ (&H1B) + "2" ; LPRINT "AAAAA" + CHR\$ (&HA) ; LPRINT "AAAAA" + CHR\$ (&HA) ; NT "AAAAA" + CHR\$ (&HA) ; NT "AAAAA" + CHR\$ (&HA) ;	ААААА ААААА ААААА ААААА ААААА ААААА	1/6-inch line feed 0/360-inch line feed 50/360-inch line feed 1/6-inch line feed 100/360-inch line feed 1/6-inch line feed

ESC 3 n

[Function]	Setting Line Feed Rate of Minimum Pitch
[Code]	<1B>H<33>H <n></n>
[Range]	$\{0 \le n \le FF\}$ Data is described in Hex code.
[Outline]	The line feed rate per line is specified by n/360 inch. Since an actual mechanical pitch is 1/203 inch, it is internally converted approximate to the value specified with this command.
[Default]	•The initial value is n = 60 (1/6 inch) (18H), being 4.23 mm line feed rate.
[Sample Program]	[Print Results]
	See Sample Program and Print Results for ESC 2 on Page 49.

ESC = n

[Function] Data Input Control

[Code] <1B>H<3D>H<n>

[Range] $\{0 \le n \le FF\}$ Data is described in Hex code.

[Outline] Selecting equipment in which data input from the host is effective. •Each bit of n indicates as follows:

Bit	F auliana an t	Value		
	Equipment	0	1	
0	Printer	Invalid	Valid	
1	Not defined			
2	Not defined			
3	Not defined			
4	Not defined			
5	Not defined			
6	Not defined			
7	Not defined			

• When the printer has not been selected, this printer abandons all the received data until it is selected by this command.

[Caution] • Even when the printer has not been selected, it can become BUSY state through printer operation.

- When the printer is deselected, this printer discards all the data until it is selected with this command.
- [Default] The initial value of n is "1".

[Sample Program]

LPRINT "AAAAA" ; LPRINT CHR\$ (&H1B) + "=" + CHR\$ (0) ; LPRINT "aaaaa" + CHR\$ (&HA) ; LPRINT CHR\$ (&H1B) + "=" + CHR\$ (1) ; LPRINT "AAAAA" + CHR\$ (&HA) ;

[Print Results]

ESC @

[Function]	Initializing the Printer
[Code]	<1B>H<40>H
[Range]	Clears data stored in the print buffer and brings various settings to the initial state (Default state).
[Caution]	Data inside the internal input buffer are not cleared.Dip switches setting are red once again.
[Sample Program]	LPRINT CHR\$ (&H1B) + " ! " + CHR\$ (&H30) ; LPRINT CHR\$ (&H1B) + "V" + CHR\$ (1) ; LPRINT "AAA" + CHR\$ (&HA) ; LPRINT CHR\$ (&H1B) + "@" ; LPRINT "AAA" + CHR\$ (&HA) ;
[Print Results]	

<u>ESC D [n] k NUL</u>

[Function]	Setting Horizontal Tab Position
[Code]	<1B>H<44>H [<n>] k<00>H</n>
[Range]	$\{0 \le n \le FFH\}$ $\{0 \le k \le 20H\}$ Data is described in Hex code.
[Outline]	 Specifying a horizontal tab position. "n" indicates the no. of columns from the beginning to the horizontal tab position. At this time, n= set position– 1 is to be specified. For example, to set the position at 9th column, n=8 is to be specified. k denotes the number of horizontal tab positions you want to set. The tab position is set at position where it is "character width x n" from the line beginning. The character width, at this time, includes the rightward space amount. In double wide characters, it is made double of the ordinary case. Tab positions can be specified are maximum 32. Specifying exceeding this is ignored. <n> k, which denotes a setting position, is input in the increasing order and ends at <00> H.</n> ESC D NUL clears all the set tab positions. Following clearing, horizontal tab command is ignored.
[Caution]	When the data, $\langle n \rangle k$, is equal to or smaller than its preceding data, $\langle n \rangle k$.1, it is assumed that tab setting is finished. If this is the case, the next data onward will be processed as normal data. When the data, $\langle n \rangle k$, exceeds a 1-line print area, set the horizontal tab position, assuming "Set digit position = Maximum print digits + 1." The horizontal tab position does not change even if the character width is altered after setting the horizontal tab position.
[Default]	• Initial value is specified for each eight characters(9 th .17 th .25 th columns) of ANK characters.
[See Also] [Sample Program]	HT [Print Results]

See Sample Program and Print Results for HT on Page 40.

ESC E n

[Function]	Specifying/canceling highlighting
[Code]	<1B>H<45>H <n></n>
[Range]	$\{0 \le n \le FF\}$ Data is described in Hex code.
[Outline]	 Specifying/canceling the highlighting characters. "n" is valid only for the lowest bit (n0). Control by the lowest bit (n0) is shown as follows: <u>n0</u> <u>Type</u> <u>0</u> <u>Canceling highlighting.</u> This is effective to all characters. Dot configuration of a highlighted character includes one extra dot added at its side.
[Caution]	• The print result of Double printing and highlight character printing is completely same.
[See Also]	ESC !
[Example]	A
[Sample Program]	LPRINT CHR\$ (&H1B) + "E" + CHR\$ (0) ; LPRINT "AAABBB" + CHR\$ (&HA) ;
[Print Results]	LPRINT CHR\$ (&H1B) + "E" + CHR\$ (1) ; LPRINT "AAABBB" + CHR\$ (&HA) ;
[]	AAABBB ← Highlighting canceled
	AAABBB ← Highlighting canceled

<u>ESC G n</u>

[Function]	Specifying/canceling Double Printing (ESC G n)			
[Code]	<1B>H<47>H <n></n>			
[Range]	$\{0 \le n \le FF\}$ Data is described in Hex code.			
[Outline]	Specifying/canceling the double printing.			
	 "n" is valid only for the lowest bit (n0). 			
	Control by n is shown as follows.			
	n0 Type			
	0 Canceling double printing.			
	1 Specifying double printing.			
	This is effective to all characters.			
[Caution]	•The print result of Double printing and highlight character printing is completely same.			
[See Also]	ESC E			
[Sample Program]				
	LPRINT CHR\$ (&H1B) + "G" + CHR\$ (0) ;			
	LPRINT "AAABBB" + CHR\$ (&HA) ;			
	I PRINT "AAABBB" + CHR\$ (&HA) ·			
[Print Results]				
[]	A A A B B B 🕁 Highlighting appealed			
	Highing canceled			
	AAABBB ← Highlighting canceled			
<u>ESC J n</u>				
[Function]	Printing and feeding paper n/203 inch			
[Code]	<1B>H<4A>H <n></n>			
[Range]	$\{0 \le n \le FF\}$ Data is described in Hex code.			
[Outline]	Prints data inside the print buffer and feeds paper by n/360 inch. Since an actual mechanical pitch is 1/203 inch, it is internally converted approximate to the value specified with this command.			
	Specified volume does not remain.			
	• The beginning of the line is to be considered as the next printing start position.			
	Initial value is not defined.			
[Sample Program]	[Print Results]			
	See Sample Program and Print Results for ESC 2 on Page 49.			

ESC R n

[Function]	Selecting the International Character set			
[Code]	<1B>H<52>H <n></n>			
[Range]	$\{0 < n < 0A\}$ Data is described in Hex code			
[Outline]	Depending on the value of n. following character sets are specified.			
	n(Hex)	Character Set	י ר ר	
	0	U.S.A.	1	
	1	France		
	2	Germany		
	3	U.K.		
	4	Denmark I		
	5	Sweden		
	6	Italy		
	7	Spain		
	8	Japan		
	9	Norway		
	A	Denmark II		
[Default]	The initial value of	f n are shown below.		
	 When domestic m 	ode is selected : 8(Japan)		
	 When internation 	al is selected : 0(U.S.A.)		
[See Also]	Character Code Ta	ble (International Character	Set)	
[Sample Program]				
FOR I=0 TO 10				
LPRINT CHR\$ (&H1B) + "R" + CHR\$ (I) ;				
	LPRINT CHR\$ (&H60	0) + "{¥}~";		
	LPRINT "n=" + STR\$	(1);		
	LPRINT CHR\$ (&HA));		
	NEXT I			
[Print Results]	#\$@[\]^`{ }~	n = 0		
	#\$à°c§^`éùè''	n = 1		
	#\$\$X00^`∋008	n = 0		
	GU∞D 001897	11 - 2		
	TPU[\] { }	n = 3		
	#\$@&!//A &@a	n = 4		
	♯¤ÉĂÖAÜéä⁰åü	n = 5		
	#\$@°\é^ùàòèì	n = 6		
	₽ t\$@; Ñ¿^```n}~`	n = 7		
	#\$@[¥]^`{ }~	n = 8		
	##F#M&116##811	n = 0		
	ℼ⋻⋸⋒⋈⋳⋃⋐⋐⋈⋳⋃ ⋕⋭⋲⋌⋒⋒⋽∡⊸∊₽⋴	10		
	#AFKNHO6%agn	n = IV		

ESC V n

[Function]	Specifying/Canceling 90°-right- turned Characters			
[Code]	<1B>H<56>H <n></n>			
[Range]	$\{0 \le n \le 1\}$ Data is described in Hex code.			
[Outline]	Specifying/canceling characters 90°-right- turned character."n" means the followings.	pecifying/canceling characters 90°-right- turned character. "n" means the followings.		
	n (Hex) Condition			
	0 Canceling 90°-right- turned Characters			
	1 Specifying 90°-right- turned Characters			
[Caution] [Default]	 No underlines are attached to 90°-right- turned characters . The initial value of n is "0". 			
[Sample Program]	$[Print Results]$ $LPRINT CHR$ (&H1B) + "V" + CHR$ (0) ; 90° Rotation Canceled$ $LPRINT "AAAAA" ; LPRINT CHR$ (&H1B) + "V" + CHR$ (1) ; AAAAA \rightarrow \rightarrow \rightarrow \Rightarrow ;$ $PRINT "AAAAA" + CHR$ (&HA) ; 90° Rotation Sne$	A →		

ESC a n

[Function]	Aligning the characters			
[Code]	<1B>H<61>H <n></n>			
[Range]	$\{0 \le n \le 2\}$ Dat	ta is described in He	ex code.	
[Outline]	All the printed •Depending on below: n (Hex) 0 1 2	data within one line n value, positional a Positio Left end alig Centeri Right end ali	e are aligned in alignment is ca on gnment ng gnment	the specified position. rried out as in the table
[Caution]	This is validThe initial valid	only when n is inpu alue of n is "0".	tted at the begi	nning of line.
[Sample Program]	LPRINT CHR\$ (& LPRINT "AAAAA LPRINT CHR\$ (& LPRINT "AAAAA LPRINT CHR\$ (& LPRINT "AAAAA	«H1B) + "a" + CHR\$ (0) " + CHR\$ (&HA) ; «H1B) + "a" + CHR\$ (1) " + CHR\$ (&HA) ; «H1B) + "a" + CHR\$ (2) " + CHR\$ (&HA) ;);););	
[Print Results]				
I	AAAAA Left-justified	A A A A A Centered	A A A A A Right-justified	Paper Feed Direction

ESC c 3 n (Parallel Interface Only)

[Function]	Selecting the paper near end sensor valid for a paper end signal output				
[Code]	<1B>H<	63>H<33>H <n></n>			
[Range]	0 ≤ n ≤25	5			
[Outline]	This com	mand selects at which	h paper near e	nd sensor a pa	per end signal should
	be outpu	t. Each bit for n has	the following r	meaning:	-
	D it	Desition	Va	lue	
	ы	POSITION	0	1	
	0	Paper near end	Disabled	Enabled	
	1~7	Undefined			
	This prir	nter can only select o	ne kind of pap	per end detecti	on, a paper-near-end
	sensor.	n is valid for the leas	t significant bi	t (n0).	
[Caution]	This command is valid only for the parallel interface.				
[Default]	A default of n is what has been set with the DIP switch (DS1-1).				
[Sample Program]					
	LPRINT CHR\$(&H1B);"c3";CHR\$(0);				
		When outputting	the paper-end	signal at the p	aper end
	LPRINT	CHR\$(&H1B):"c3":CH	HR\$(1):	5 1	•
		When outputtin	a the paper-en	d signal at the	naper near end

ESC c 4 n

[Eunction]	Selecting the paper pear and senser valid for print step				
[Function]	Selecting	j the paper field end s		print stop	
[Code]	<1B>H<	63>H<34>H <n></n>			
[Range]	$0 \le n \le 2$	55			
[Outline]	This com	nmand selects at which	n paper near en	nd sensor printi	ng should be stopped.
	Each bit	for n has the following	g meaning:		•
	Dit	Desition	Va	lue	
	BIt	Position	0	1	
	0	Paper near end	Disabled	Enabled	
	1~7	Undefined			
	This pri	nter can only select o	ne kind of pap	per-end detecti	on, a paper-near-end
	sensor.	n is valid for the leas	t significant bit	t (n0).	
[Caution]	If print	stop is enabled, the p	orinter will pr	int (Feed the	paper) 150 cm or an
	amount of data specified with the ESC n command and go off-line.				
[Default]	A default of n is what has been set with the DIP switch (DS1-1).				
[Sample Prog	ram]				
	LPRINT	CHR\$(&H1B);"c4";CH	HR\$(0);		
		When stopping pr	inting at the pa	aper end	
	LPRINT CHR\$(&H1B);"c4";CHR\$(1); When stopping printing at the paper near end				

ESC c5 n

[Function] [Code]	Enabling/Disa	abling Panel Switches <35>H <n></n>		
[Range]	$\{0 \le n \le FF\}$	Data is described in Hex code.		
[Outline]	Selecting the	LF switch valid/invalid.		
	• "n" is valid	only in the lowest bit (n0).		
	• "n" bit mea	ns the followings.		
	n0	Condition		
	0	LFSW valid.		
	1	LFSW invalid.		
[Caution]	When the par	nel switch is disabled with this con	nmand, the LF switch is	
	disabled. Therefore, the paper cannot be fed by operating the LF switch.			
[Default]	The initial value of n is "0".			
[Sample Program]				
	LPRINT CHR\$	(&H1B) + "c5" + CHR\$ (0) ; When	n enabling the LF switch	
	LPRINT CHR\$	(&H1B) + "c5" + CHR\$ (1) ; Whei	n disabling the LF switch	

ESC	d	n

[Function] [Code]	Printing and Feeding the paper by n lines <1B>H<64>H <n></n>
[Range]	* $\{0 \le n \le FF\}$ Data is described in Hex code.
[Outline]	Prints data inside the buffer and feeds paper by n lines.
	Specified line does not remain.
	• The beginning of the line is to be considered as the next printing start position.
[Default]	The initial value is not defined.
[Sample Program]	
	LPRINT "AAAAA"
	LPRINT CHR\$ (&H1B) + "d" + CHR\$ (2) ;
	LPRINT "AAAAA" + CHR\$ (&HA) ;
[Print Results]	
	AAAAA 2/6-inch line feed
ESC i (When Using Auto Paper Cutter)

[Function]	Full Cut
[Code]	<1B>H<69>H
[Outline]	Activating auto cutter unit (Full cut)
[Caution]	This is valid only when n is inputted at the beginning of line.
	• Prior to cutting the paper, feed the paper from the printing position to beyond the paper cutting position of the cutter. Otherwise, the character just after print will remain on this side of the cutter.
[Sample Program]	
	LPRINT "AAAAA" ;
	LPRINT CHR\$ (&H1B) + "J" ;
	LPRINT CHR\$ (150) ;
	LPRINT CHR\$ (&H1B) + "i" ;
	LPRINT "AAAAA" ;
	LPRINT CHR\$ (&H1B) + "J" ;
	LPRINT CHR\$ (150) ;
	LPRINT CHR\$ (&H1B) + "i" ;
[Print Results]	



ESC m (When Using Auto Paper Cutter)

[Function]	Partial Cut
[Code]	<1B>H<6D>H
[Outline]	Activating auto cutter unit (Partial cut)
[Caution]	This is valid only when n is inputted at the beginning of line.
	• Prior to cutting the paper, feed the paper from the printing position to
	beyond the paper cutting position of the cutter. Otherwise, the
	character just after print will remain on this side of the cutter.
[Sample Program]	
	LPRINT "AAAAA" ;
	LPRINT CHR\$ (&H1B) + "J" ;
	LPRINT CHR\$ (150) ;
	LPRINT CHR\$ (&H1B) + "m" ;
	LPRINT "AAAAA" ;
	LPRINT CHR\$ (&H1B) + "J" ;
	LPRINT CHR\$ (150) ;
	LPRINT CHR\$ (&H1B) + "m" ;
[Print Results]	



ESC t n

[Function]	Selecting Character Code Table			
[Code]	<1B>H<74>H <n></n>			
[Range]	$\{0 \le n \le 1\}$ Data is described in Hex code.			
[Outline]	Selecting Page n on the character code table:			
	The character co	ode table is selected depending on the value of n.		
	"n" means the fo	ollowings.		
	n (Hex)	Condition		
	0	Page0(IBM Character #2)		
	1	Page1(Domestic Characters)		
[Default]	The initial value	e of n are shown below		
	When Japan	is selected : 1(Domestic characters)		
	• When non-Ja	pan is selected : 0(IBM characters #2)		
[See Also]	Character Code	Table		
[Sample Program]				
	LPRINT CHR\$ (&H1B) + "t" + CHR\$ (0) ;			
	LPRINT " n=0" ;			
	FOR C=&HB1 TO &HB5			
	LPRINT CHR\$ (C) ;			
	NEXT C			
	LPRINT CHR\$ (&HA) ;			
	LPRINT CHR\$ (&H1B) + "t" + CHR\$ (1) ;			
	LPRINT " n=1" ;			
	FOR C=&HB1 TO	&HB5		
	LPRINT CHR\$ (C) ;			
	NEXT C			
	LPRINT CHR\$ (&	HA) ;		
[Print Results]				
	n = 0 🕷	₩ ← Page 0		
	n = 1 7	የተሳ፤オ ← Page 1		

ESC v (Serial Interface Only)

[Function]	Transmitting the printer status(Serial Type)
[Code]	<1B>H<76>H
[Outline]	Current printer status is transmitted

- Status sent out consists of 1 byte whose content is as in the table below.
 - In DTR/DSR control, after receptible state of the host (DSR signal being in SPACE state) is confirmed, only 1 byte is transmitted. In XON/XOFF control, DSR signal state not being confirmed, only 1 byte is transmitted.
 - In DTR/DSR control, when the host is in unreceptible state(DSR signal being in MARK state), it waits until receptible state is created.
 - In paper end (paper near end) status, this command may be unreceptible state due to BUSY state.

Remarks. This command is valid only for serial interface model.

Bit	Function	Value	
		0	1
0	Not defined		
1	Not defined		
2	Paper end	With paper	Without paper
3	Not defined		
4	Not used	Fixed to 0	-
5	Not defined		
6	Not defined		
7	Not defined		

[Sample Program]

[Caution]

OPEN "COM1:N81NN" AS #1 ; PRINT #1, CHR\$ (&H1B) + "v" ; A\$ = INPUT\$ (1, #1) ; CLOSE #1

ESC { n

[Function]	Specifying/Canceling the Inverted Characters			
[Code]	<1B>H<7B>H <n></n>			
[Range]	$\{0 \le n \le FF\}$ Data is described in Hex code.			
[Outline]	Specifying/canceling inverted characters.			
	 "n" is valid only for the lowest bit (n0). 			
	Bit n (n0) means the followings.			
	n0 Condition			
	0 Canceling inverted characters.			
	1 Specifying inverted characters.			
[Caution]	 Inverted printing means printing the line at 180° turned. 			
	• This is valid only when this is specified at the beginning of a line.			
[Default]	• The initial value of n is "0".			
[Sample Program]				
	LPRINT CHR\$ (&H1B) + "{" + CHR\$ (0) ;			
	LPRINT "AAAAA" + CHR\$ (&HA) ;			
	LPRINT "BBBBB" + CHR\$ (&HA) ;			
	LPRINT CHR\$ (&H1B) + "{" + CHR\$ (1) ;			
	LPRINT "AAAAA" + CHR\$ (&HA) ;			
	LPRINT "BBBBB" + CHR\$ (&HA) ;			
[Print Results]				
AAAAA BBBBB Inversion Canceled				
	Inversion Specified (VVVV 88888			

ESC \$ n1 n2

[Function]	Specifying the Absolute Positions
[Code]	<1B>H<24>H <n1><n2></n2></n1>
[Range]	$\{0 \le n1 \le FF\}$
	$\{0 < n^2 < 1\}$ Data is described in Hex code
[Outline]	The printing start position is specified in the number of dots $(1/203)$ inch
[Outline]	unit) from the beginning of line
	• The number of dots is divided by 256, whose quotient is taken as n2 and
	the residual as n1.
	• Therefore, the printing start position is equal to n1 + n2 x 256 from the beginning of line
[Courtion]	Degritting of the line and is impared
	• Specifying beyond the line end is ignored.
[Default]	The initial value is not specified.
[See Also]	ESC ¥
[Sample Program]	
	LPRINT CHR\$ (&H1B) + "\$" ;
	LPRINT CHR\$ (0) + CHR\$ (0) + "A" ;
	LPRINT CHR\$ (&H1B) + "\$" ;
	LPRINT CHR\$ (50) + CHR\$ (0) + "B" ;
	LPRINT CHR\$ (&H1B) + "\$" ;
	LPRINT CHR\$ (0) + CHR\$ (1) + "C" ;
	LPRINT CHR\$ (&HA) ;
	LPRINT CHR\$ (&H1B) + "\$" ;
	LPRINT CHR\$ (100) + CHR\$ (0) + "A" ;
	LPRINT CHR\$ (&H1B) + "¥" ;
	LPRINT CHR\$ (&HC2) + CHR\$ (&HFF) + "B" ;
	LPRINT CHR\$ (&HA) ;
[Print Results]	
	Absolute Position Specified
	0 50 100 256
	A B C
	B A
	[]

Relative Position Specified -62

<u>ESC ¥ n1 n2</u>

[Function]	Specifying the Relative Positions
[Code]	<1B>H<5C>H <n1>< n2></n1>
[Range]	$\{0 \le n1 \le FF\}$
	$\{0 \le n2 \le FF\}$ Data is described in Hex code.
[Outline]	The printing start position is specified in the number of dots(1/203 inch unit) from the current position.
	Rightward direction is taken as plus and leftward direction as minus.
	• To specify N dot in minus (left) direction, use a complement of N for assignment.
	–N dots = 65536 – N
	• The number of dots is divided by 256, whose quotient is taken as n2 and the residual as n1.
[Caution]	• Specifying exceeding the top of line or the end of line is ignored.
[Default]	The initial value is not specified.
[See Also]	ESC \$
[Sample Program]	[Print Results]

See Sample Program and Print Results for ESC \$ on Page 66.

<u>GS k n [d] k NUL</u>

[Function]	Printing the Bar Code
[Code]	<1D>H<6B>H <n> [< d>] k <00>H</n>
[Range]	$\{0 \le n \le 7\}$ Data are described in Hex code.
[Outline]	Specifying a type of bar code and printing bar codes.
	 The beginning of line is considered as the next printing start position.
	 Depending on the value of n, the following bar code can be selected.
	d indicates a character code to be printed and k indicates the number of

character to be printed.				
n (Hex)	Bar Code System	Maximum Columns		
0	UPC-A			
1	UPC-E			
2	JAN13 (EAN)			
3	JAN 8 (EAN)			
4	CODE 39	19		
5	ITF	35		
6	CODABAR (NW-7)	25		
7	CODE 128	23		

[Caution] When data being held in the print buffer, this command is ignored.

- Regardless of the specified feed pitch, this command feeds the paper to be required to print a bar code.
- If the character code d cannot be printed in the respective bar code system, the bar code so far will be printed, processing the subsequent data as normal data.
- When a bar code whose number of characters to be printed is fixed has been selected, the number of characters k have to be always made equal to the number of characters to be printed. (The bar code is not printed when not matching.)
- When the horizontal direction exceeds one line length, the excess part is not printed.

[Default] • The initial value is not specified.

[Description of Bar Codes] <For print examples, see Page 70.>

UPC-A This bar code, consisting of numerals only, has a fixed length of 12 column; a 11columns number entered from the host or application software plus a check column(12th column) automatically calculated inside the printer. If the 12thcolumn numeral is sent from the host, the entire bar code will be printed as it is.

- UPC-E This bar code, consisting of numerals only, has a fixed length of 8 column; the first number system character is "0" stationary. A 12-column numeral entered from the host or application software is compressed to 8 columns with a check column and printed. The 12th-column check column is automatically calculated inside the printer and sent from the host, the entire bar code will be printed, compressed to 8 columns.
- JAN-13(EAN) This bar code, consisting of numerals only, has a fixed length of 13 column; a 12column number entered from the host or application software plus a check column(13th column) automatically calculated inside the printer. If the 13thcolumn numeral is sent from the host, the entire bar code will be printed as it is.
- JAN-8(EAN) This bar code, consisting of numerals only, has a fixed length of 8 column; a 7column number entered from the host or application software plus a check column(8th column) automatically calculated inside the printer. If the 8thcolumn numeral is sent from the host, the entire bar code will be printed as it is.
- CODE39 This bar code, consisting of uppercase alphabets and numerals, has a variable length of column. A start/stop code "*" is automatically added by the printer. Available characters include a space and " \$ %* + -• / 0 1 2 3 4 5 6 7 8 9 " and uppercase alphabets.
- ITF This bar code, consisting of numerals only, has a variable length of even column. If an odd-column code is transferred, nothing will be printed.

CODABAR (NW-7)

This bar code, consisting of alphanumeric, has a variable length of column. Available characters include " 0 1 2 3 4 5 6 7 8 9 A B C D \$ + - . / : " A start/stop code is required; any one of A, B, C, and D is used.

- CODE128 This bar code consists of all of 128 ASCII code characters and has a variable length of column. This printer supports the code subsets A, B, and C. By prefixing a transfer code with any one character of A, B, and C, you can select the code subset to start from. If not prefixed with A, B, or C, the code subset B will be selected.
 - The code subset A is the bar code consisting of standard uppercase alphabets, numerals, symbols, and special codes.
 - The code subset B is the bar code consisting of standard uppercase/lowercase alphabets, numerals, symbols, control codes, and special codes.
 - The code subset C is the bar code consisting of special characters and 100 kinds of numbers ranging from 00 to 99.

- The check column automatically calculated inside the printer is added to the end of the entered column to be printed.
- Processing of the special characters

The characters above the ASCII code number 96 are considered special characters. The following lists the converted characters for entering these characters.

ASCII Code	Converted Character	Subset Code A	Subset Code B	Subset Code C
96	80h	FNC 3	FNC 3	-N/A-
97	81h	FNC 2	FNC 2	-N/A-
98	82h	SHIFT	SHIFT	-N/A-
99	83h	CODE C	CODE C	-N/A-
100	84h	CODE B	FNC 4	CODE B
101	85h	FNC 4	CODE A	CODE A
102	86h	FNC 1	FNC 1	FNC 1

The following exemplifies a selection of the code subset as a method to utilize the special characters.

<Selection of Code Subset>

- Initial selection: Enter any one character of A, B, and C.
- Conversion on the way: Enter any one character of 82h through 85h

Example) When initially testing with the code subset B, and then, printing the bar code, "123," with the code subset A

- Input code : B TEST <85> 123
- Bar code data : <CODE B>TEST<CODE A>123

[Sample Program]

```
LPRINT CHR$ (&H1D) + "H" + CHR$ (2) ;
LPRINT CHR$ (&H1D) + "k" ;
LPRINT CHR$ (4);
LPRINT "123" + CHR$ (0) ;
```

[Print Results]



When the data "123" is printed with the code 39

[Description of Bar Codes]

UPC-A, UPC-E, JAN-13 (EAN), JAN-8 (EAN), CODE39, ITF, CODABAR, CODE128

Туре	Print Sample	Outline of Symbol	Max. column
UPC-A		12-columns fixed-length bar code consisting of numerals only	_
UPC-E		8-columns fixed-length bar code consisting of numerals only. Abbreviated version of UPC-A	_
JAN-13		13-columns fixed-length bar code consisting of numerals only	_
JAN-8		8-columns fixed-length bar code consisting of numerals only	_
CODE39		Variable-length bar code consisting of alphabets and numerals. The start/stop code "*" is automatically added.	19
ITF		Even-columns variable-length bar code consisting of numerals only	35
CODABAR (NW-7)	a i i i i i i i i i i i i i i i i i i i	Variable-length bar code consisting of alphanumeric. Any one of A, B, C, and D is required as the start/stop code.	25
CODE128	ABCD 12345	Variable-length bar code consisting of all 128 ASCII code characters.	23

Printing is done depending on bar code specification type, number of print column, bar code height, width (Magnification), visible code presence, and bar code data specification.

<u>GS w n</u>

[Function]	Selecting the horizontal size(Scale factor) of the Bar Code
[Code]	<1D>H <77>H <n></n>
[Range]	$\{2 \le n \le 4\}$ Data is described in Hex code.
[Outline]	Selecting bar code width.
	n denotes the number of dots in fine element width.
[Default]	•The initial value of this width is "3".
[Sample Program]	
	LPRINT CHR\$ (&H1D) + "h" + CHR\$ (30) ;
	LPRINT CHR\$ (&H1D) + "w" + CHR\$ (2) ;
	GOSUB BC
	LPRINT CHR\$ (&H1D) + "h" + CHR\$ (50) ;
	LPRINT CHR\$ (&H1D) + "w" + CHR\$ (3) ;
	GOSUB BC
	LPRINT CHR\$ (&H1D) + "h" + CHR\$ (80) ;
	LPRINT CHR\$ (&H1D) + "w" + CHR\$ (4) ;
	GOSUB BC
	END
	BC :
	LPRINT CHR\$ (&H1D) + "k" ;
	LPRINT CHR\$ (4) ;
	LPRINT "12" + CHR\$ (0) ;
	RETURN
[Print Results]	
	Magnification 2



<u>GS h n</u>

[Function]	Selecting the height of the Bar Code
[Code]	<1D>H<68>H <n></n>
[Range]	$\{1 \le n \le FF\}$ Data is described in Hex code.
[Outline]	Selecting bar code height. n denotes the number of dots in the vertical direction.
[Default]	•The initial value of n is "162".
[Sample Program]	[Print Results]

See Sample Program and Print Results for GS w on page 72.

<u>GSH</u>n

[Function]	Selecting of Printing Position of HRI Code										
[Code]	<1D>H<48>H <n></n>										
[Range]	$\{0 \le n \le 3\}$ Data is described in Hex code.										
[Outline]	Selecting printing position of HRI code in printing bar codes.										
	 "n" means the followings. 										
	n (Hex) Printing Position										
	0 No printing										
	1 Above the bar code										
	2 Below the bar code										
	3 Both above and below the bar code										
	The HRI code refers to the bar code-turned characters so that you can read										
	them.										
[Caution]	The HRI code is printed in the font selected with GS f.										
	Specify before the GS k command.										
[Defult]	•The initial value of n is "0".										
[See Also]	GS f										
[Sample Program]	[Print Results]										
	LPRINT CHR\$ (&H1B) + "3" + CHR\$ (5) ;										
	LPRINT CHR\$ (&H1D) + "h" + CHR\$ (50) ;										
	LPRINT CHR\$ (&H1D) + "H" + CHR\$ (0) ;										
	LPRINT CHR\$ (&H1D) + "H" + CHR\$ (1) ; COSLIB PC										
	GOSUB BC										
	LPRINT CHR\$ (&H1D) + "H" + CHR\$ (3) ; * 2 *										
	GOSUB BC * 1 2 * 1										
	BC : Printed above and below										
	LPRINT CHR\$ (&H1D) + "k"; * 1 2 *										
	LPRINT CHR\$ (4) ;										
	RETURN										

<u>GS f n</u>

[Function]	Selecting th	e font of HRI code
[Code]	<1D>H<66>	·H <n></n>
[Range]	n = 0, 1	
[Outline]	Selecting th	e font of HRI code in printing bar code.
	The type of t	font can be printed by selecting n is as follows.
	n	Font
	0	Font A
	1	Font B
	The HRI coo	de refers to the bar code-turned characters so that you can read
	them.	
[Caution]	The HRI coo	le is printed at the position specified with GS h on page 73.
[Default]	The initial v	value of n is "O".
[See Also]	GS H	
[Sample Program]		
	LPRINT CHR	\$ (&H1D) + "h" + CHR\$ (50) ;
	LPRINT CHR	\$ (&H1D) + "H" + CHR\$ (2) ;
		\$ (&H1D) + "f" + CHR\$ (0) ;
	I PRINT CHR	\$ (&H1D) + "f" + CHR\$ (1) :
	GOSUB BC	
	END	
BC	C :	
	LPRINT CHR	\$ (&H1D) + "k" ;
	LPRINT CHR	\$ (4) ;
		* + CHR\$ (0) ; \$ (8.4 A) -
	RETURN	
[Print Results]		
	*	2 3 * ← FONTA
		2 3 1 FONT B

<u>GS * n1 n2 [d] n1 × n2 × 8</u>

[Function] [Code] [Range]	Defining the Download Bit Image <1D>H<2A>H <n1><n2> [< d >] n1 × n2 × 8 {$1 \le n1 \le FF$} {$1 \le n2 \le 30$}</n2></n1>
[Outline]	 {n1 × n2 ≤ 51F} Data is described in Hex code. Defines downloading bit images of the number of dots specified by n1/n2. The numbers of dots are n1 x 8 in horizontal direction and n2 x 8 in vertical
	 direction. d indicates bit image data. The download bit image thus defined remains effective until redefinition, ESC @ execution, ESC &, or power OFE takes place.
[Caution]	 A download character and a download bit image can not be defined simultaneously. With this command executed, defined content of a download character is cleared.
	• Relations between the bit image data and the dot defined are shown below:
[See Also]	GS /



[Sample Program] GOSUB IMG LPRINT CHR\$ (&H1D) + "/" + CHR\$ (0) ; LPRINT CHR\$ (&H1D) + "/" + CHR\$ (1) ; LPRINT CHR\$ (&H1D) + "/" + CHR\$ (2) ; LPRINT CHR\$ (&H1D) + "/" + CHR\$ (3) ; END IMG : n 1 = 10 : n 2= 5 LPRINT CHR\$ (&H1D) + "*"; LPRINT CHR\$ (n1) + CHR\$ (n2) ; FOR J=1 TO n1*8 FOR I=1 TO n2 LPRINT CHR\$ (J) ; NEXT I NEXT J RETURN

[Print Results]



<u>GS / m</u>

[Function] Printing the Download, Bit Image												
[Code]	<1D>H<2F>H <m< td=""><td>></td><td></td></m<>	>										
[Range	e] {0 ≤ m ≤ 03} Dat	a is described in Hex code.										
[Outline] Prints download bit image in a mode specified by m.												
	 Modes can be selected by m are shown below. 											
m	Mode Name	Dot Density in Vertical Direction	Dot Density in Horizontal Direction									
0	Normal mode	203 DPI	203 DPI									
1	Double wide mode	203 DPI	101 DPI									
2	Double high mode	101 DPI	203 DPI									
3	Double wide/double high mode	101 DPI	101 DPI									
[Cauti	on] • When data exis • When a downl ignored. • A portion of a	st inside the print buffer, th oad bit image has not be download bit image exc	nis command is ignored. Sen defined, this command Reding one line length is									

• A portion of a download bit image exceeding one line length is not printed.

is

- A download character and a download bit image cannot be defined simultaneously.
- [Default] The initial value is not specified.

[See Also] GS *

[Sample Program]

[Print Results]

See Sample Program and Print Results for GS * on Page 76.

<u>GS</u> :

[Function]	Starting / Ending Macro Defir	nition
[Code]	<1D>H<3A>H	
[Outline]	Specifying starting / ending m Means termination when rece	nacro definition. Nived while defining a macro.
[Caution]	 Maximum content available for exceeding 2048 bytes is not determined on the exceeding 2048 bytes is not determined content is not clear and the content of the con	or macro definition is 2048 bytes. A portion fined. zation of the printer) having been executed, red. Therefore, it is possible to include ESC definition. is carried out even while in macro definition
[Default]	Initially, Macro is not specified	fied.
[See Also]	GS ^	
[Sample Program] L L L L L L L L	PRINT CHR\$ (&H1D) + " : " ; PRINT "+ +" + CHR\$ (&HA) ; PRINT " " + CHR\$ (&HA) ; PRINT "+ +" + CHR\$ (&HA) ; PRINT CHR\$ (&H1D) + " : " ; PRINT CHR\$ (&H1D) + " ^ " ; PRINT CHR\$ (2) + CHR\$ (10) ; PRINT CHR\$ (0) ;	[Print Results] ++ T Normal Printing during Macro Definition ++ T I I ++ T ++ T I I ++ T I I ++ T I I ++ T ++ T +++ T +++ T ++ T ++ T ++ T ++ T ++ T +++ T ++++ T ++++ T ++++++++++++++++++++++++++++++++++

<u>GS ^ n1 n2 n3</u>

[Function]	Executing the Macro										
[Code]	<1D>H<5E>H <n1><n2><n3></n3></n2></n1>										
[Range]	$\{0 \le n1 \le FF\}$										
	$\{0 \le n2 \le FF\}$										
	$\{0 \le n3 \le 1\}$ Data is described in Hex code.										
[Outline]	Executing contents defined in macro.										
	 "n1~n3" indicate as follows: 										
	n1 : The number of times of macro execution										
	n2 : Waiting time on macro execution										
	Waiting time of n2 x 100 msec is given for every execution.										
	n3 : Macro execution mode										
	n3 Mode										
	0 Continuous execution										
	I Execution by LFSW										
	Continuous execution: The Macro is executed n1 times continuously at the time intervals specified by n2.										
	Execution by FEED S: After waiting for lapse of time specified by n2, the ALAME LED flickers and the LF switch is waited to be pressed. When it is pressed, the macro is executed once.										
	This action is repeated n1 times.										
[Caution]	• When this command is received while in macro definition, suspension of macro definition is indicated. At this time, the defined content is cleared.										
	 No execution takes place when macro is held undefined or n1=0. 										
	• While in macro execution with n3=1, paper feed with the LF SW is not available.										
[Default]	 Initially, this command is not specified. 										
[See Also]	GS :										
[Sample Program]	[Print Results]										

See Sample Program and Print Results for GS : on Page 79.

11. CHARACTER CODES TABLE

11.1 International

Ĺ L _	111	+	٨I	VI			• •	??	0	•	•	$\overline{}$	u	2		SP
E	8	ß	L	μ	Σ	σ	ท่	1	Φ	θ	S	δ	8	ϕ	3	С
D	-1	┢	Т	L	L	L	L	╉	+	٦	Ĺ			1		
С	Г	-1	T-	_1_		+	⊥	┵	L	L	Т	F	4		+	-
В			***		Ţ	т	-	L	٢	7-		۲	٦	٦	٦	L L
A	á	í	ó	ú	ň	Ñ	व	0	į	L	Г	2:4	+-1 4		}}	\$
6	·Ш	æ	Æ	ô	ö	ò	û	ù	ÿ	0	ü	¢	£	¥	Ŗ	f
×	С	ü	é	~d	\$	a,	à	ç	ê	:0	è	ï	·	, T	Ā	Y
1	d	Ъ	L	s		Þ	^	W	×	y	2	}	—	~	ł	SP
9	l.	а	q	U	ъ	e	4.	50	h			k	-	Ħ	u	0
رم ا	4	Ø	R	S	F	D	Ν	M	×	Υ	Ζ	<u> </u>	-		<	
+	B	A	ш	ပ	Ω	ш	щ	IJ	Н	I	J	Х	Г	М	Z	0
с С	0	-	7	m	4	S	6	1	∞	6		• •	V	11	^	?
5	SP		5	#	\$	%	ઝ	-			*	+	· `	•		-
-		NO		XOF								ESC	FS	GS		
0	NUL									HT	LF					
	0		2	3	4	5	9	2	8	6	A	В	С	۵	ш	ы

11.2 Japanese

<u>́</u> ц	×	E	年	J	ш	眩	Å	龟	F	Ŧ	M	Ш	工	\prec	***	S P
ы	1	Т.	+	-	٦				ŧ	>	٠	4	•	0	~	/
Д		4	~	н	4	Ч	m	IN	ſ	r	د	۵	6	>	•	•
<u>ں</u>	Ł	¥	2	١Ļ	<u> </u>	+	11	ĸ	*	~	<	ц	2	<	ť	Þ
а	1	۴	\mathbf{r}	£	н	*	Ŗ	#	4	4	п	+	ŵ	ĸ	4	· ~
P	S P	o	<u> </u>	_	,	•	F	Ь	ł	4	н	₩	4	τį	m	Ň
6	-	F	–	L	I		_		L	Г	L	٦	J	ſ	ر	<u>ر</u>
œ		I	1	I					_		-					+
7	٩	σ	F	w		д	>	₩	×	٨	Z	}	_	-	2	S P
9		c3	م	υ	סי	ల	44	ы	д			ĸ	-1	Ħ	а	0
Ω.	ዲ	° OF	R	s	н	D	Δ	м	×	Y	z	U	*		•	1
4	0	A	щ	υ	A	ш	ſĽ	G	н	н	5	Х	Г	M	N	0
ო	0	1	~	ო	4	വ	9	7	œ	6			V	11	^	ė
2	SP		E	#	63	*	ન્ઝ				*	+	-	1		\ \
1		ROI		XOF								BSC	F S	GS		
0	אמר									нТ	г в Г					
	0	н	2	e	4	£	9	2	ø	6	A	B	ပ	Ω	ш	ju,

	国名	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E
0	U.S.A.	#	\$	0	C	\mathbf{i}	כ	•	•	(1	}	~
1	France	#	\$	à	•	Ç	§	•	•	é	ù	è	••
2	Germany	#	\$	§	Y	Ö	Ü	•	•	ā	0	۵	6
3	U.K.	£	\$	@	٢	\mathbf{X}	C	•	•	{		}	~
4	Denmark I	#	\$	@	Æ	Ø	Å	•	•	æ	ø	â	~
5	Sweden	#	α	É	Y	Ō	¥	Ũ	é	a	Ō	â	۵
6	Italy	#	\$	@	•	\mathbf{i}	é	•	ù	à	ò	è	1
7	Spain	P	\$	@	i	Ń	3	•	•		ń	}	~
8	Japan	#	\$	@	Ľ	Ϋ́.	כ	•	•	{	ļ	}	~
9	Norway	#	u	É	Æ	Ø	¥	Ü	é	æ	Ø	â	û
10	Denmark II	#	\$	É	Æ	Ø	Y	Ü	é	æ	ø	â	۵

11.3 International Character Code Table

APPENDIX 1. BLOCK DIAGRAM

*1 Parallel Interface --- Centronics compliant Serial Interface --- RS-232C compliant



APPENDIX 2. OUTLINE DRAWING FOR PPU

APPENDIX 3. OUTLINE DRAWING FOR PHU

